

Series 52

52/XR MADI Router Manual

© 2010 DHD Deubner Hoffmann Digital GmbH

Version: 1.14.0

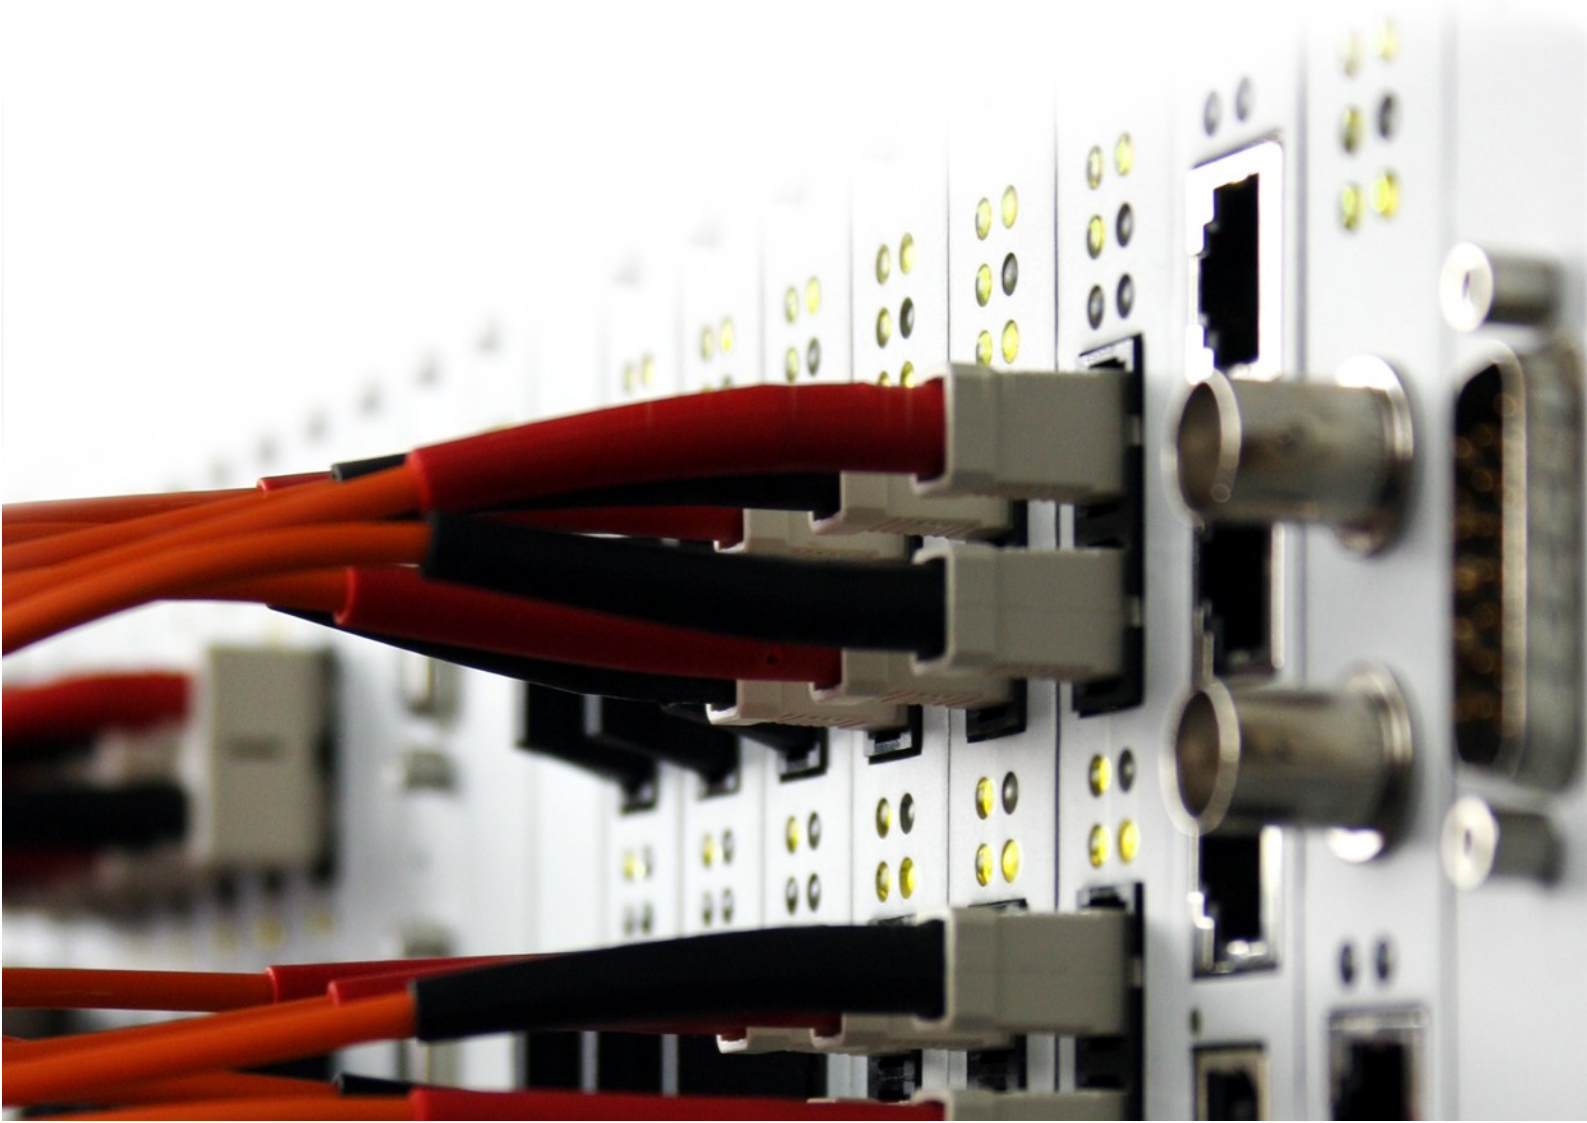


Table of Contents

1	Terms of Use - Legal Disclaimer	1
2	About this Book	2
3	What is new in this version of the manual?	4
4	General Information	7
5	Assemble a Device	9
1	List of Modules	9
2	Redundancy Options	10
	Controller Redundancy	11
6	Connecting the Device to a PC	14
1	Configuring the Ethernet Interface	14
	IP Basic Settings	14
	IP Configuration	15
2	The USB Interface	18
7	Configuration and Operation of an 52/XR MADI Router	21
1	Configuring with the Toolbox5 Software	21
	Add Devices	23
	DSP Frame I/O Configuration	24
	Configure and Label Single Inputs and Outputs	26
	Configuring MADI Redundancy	27
	Linked 52/MB at a MADI Port	28
	Synchronisation	29
	Transferring a Configuration to a Device	30
2	Operation with DHDOS and DHDOM	31
8	Further Information	32
1	Maintenance	32
	Firmware Update	32
2	I/O Module Pin Assignment	34
	52-5310A - MB/XD/XR GPIO Module, 8 out,4 in	34
	52-5311A - MB/XD/XR GPIO Module, 8 out,4 in	35
	52-5320A - XD/XR GPIO Module, 16 out, 4 in	36
	52-6710A - XR Router/DSP Sync. Module	37
	52-6720A - XR True Output Monitoring	38
3	Meaning of the LEDs	39

52-6120A - XR Dual MADI Module, multimode	39
52-6125A - XR Dual MADI Module, single mode	40
52-6129A - XR Dual MADI Module, multi/single	41
52-5310A - MB/XD/XR GPIO Module, 8 out, 4 in	43
52-5311A - MB/XD/XR GPIO Module, 8 out, 4 in	44
52-5320A - XD/XR GPIO Module, 16 out, 4 in	45
52-6440A - XR Router/DSP Kernel Module 4096	46
52-6442A - XR Router/DSP Kernel Module 2048	47
52-6850A - XR Comm. Controller, red.	48
52-6851A - XR Communication Controller	49
52-6710A - XR Router/DSP Sync. Module	50
52-6720A - XR True Output Monitoring	51
52-5860A - XD/XR RS232/RS422 Extender	52
4 Audio Latency	53
5 Example of Use	54

Index

1 Terms of Use - Legal Disclaimer

Series 52

52/XR MADI Router Manual

© 2010 DHD Deubner Hoffmann Digital GmbH

This manual is copyright of DHD. It might be distributed and copied as long as it is copied completely as a whole and this copyright notice is included.

No part of this document may be copied or distributed without prior written permission of DHD Deubner Hoffmann Digital GmbH.

Windows is a registered trademark of Microsoft Corp., Redmond, Wash., USA. All other trademarks are the property of their respective owners.

Specifications and design are subject to change without notice.

The content of this document is for information only. The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does neither convey nor imply any license under patent rights or other industrial or intellectual property rights.

Version 1.14.0, 14.04.2010

2 About this Book


This manual refers to the Toolbox5, Version 6.5.21, the DHD Operation Manager, Version 1.4.18 and the DHD Operation Server, Version 1.4.18

This manual will provide you a comprehensive overview about the applications of an 52/XR MADI Router and explains its configuration.

The content of this manual is subject to change without notice. DHD recommends to visit the DHD website once in a while to check if there is a newer version of this document available.

How to Use this Book

The Navigation Tree

You can find the navigation tree on the left-hand-side of the PDF document. Via the entries of this tree you can directly reach the several chapters and sections of this document. Click onto the text or the  symbol of an entry to display its content.

If a chapter includes further sections, you will find a plus-symbol in front of the entry in the navigation tree. Either you can click onto this plus-sign or you double click the text or the symbol of the entry to make the sub-branches of the further sections visible.



Search

You can find an alphabetical ordered list of keywords at the end of the document. Please see the page numbers in this index to find the respective keywords in the document.

Moreover, you can use the search function of your PDF reader to seek for any words.





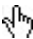

Links

Links are underlined to separate them from the rest of the text. These links can be a connection to other chapters or sections in the same document or to an URL (internet address).

- Same document: The hand symbol  appears if you move the mouse over the link.
- URL: The hand symbol with an additional w  appears if you move the mouse over the link.

Please notice, that you need an active internet connection to be able to execute a link to an URL.

The Meaning of Advices in the Text

Warning 	The demands and advices in this fields should be followed unconditional , because otherwise hardware and software products, data bases, as well as persons may suffer a loss.
Important 	The demands and advices in this fields should be followed, because these contents are necessary for the proper operation of the DHD systems.
Note 	Recommendations and further information are marked as notes. Sometimes you will also find off-topic content in this field, which is related to the actual topic.
Tip 	Tips are helpful advices, which should make work with DHD systems easier.
Weblink 	<p>In this fields you can find links to websites, which include for example an other manual or the possibility to download a driver for the respective DHD system.</p> <p>Please notice, that you need an active internet connection to be able to execute a link to an URL.</p>
Download 	You can directly open and download a file if the respective link is marked as download link (file link).

3 What is new in this version of the manual?

All sections that had been added, deleted or changed are listed below. Click on the entries to reach the respective sections directly.

Current version (1.14.0):

Chapter / Section	State	Note
Audio Latency	changed	SDI embedder/de-embedder added

Version 1.13.0:

Chapter / Section	State	Note
About this Book	changed	Intended software versions changed: <ul style="list-style-type: none"> • Toolbox5 - from version 6.3.5 to 6.5.21 • DHDOM - from version 1.2.5 to 1.4.18 • DHDOS - from version 1.2.4 to 1.4.18
List of Modules	changed	Modules added.
Controller Redundancy	changed	Information changed and added.
Linked 52/MB at a MADI Port	changed	Information added.
Synchronisation	changed	Information added.
Operation with DHDOS and DHDOM	changed	Information added.

Version 1.12.0:

Chapter / Section	State	Note
Operation with DHDOS and DHDOM	changed	Information added.

Version 1.11.0:

Chapter / Section	State	Note
Terms of Use - Legal Disclaimer	changed	Formal adaptations. Legal disclaimer added to the footer of all topic pages.

Version 1.10.0:

Chapter / Section	State	Note
<u>Audio Latency</u>	changed	Topic name changed from Audio Delay to Audio Latency.

Version 1.9.0:

Chapter / Section	State	Note
<u>Controller Redundancy</u>	added	
<u>Synchronisation</u>	changed	Information added.
<u>52-5860A - XD/XR RS232/RS422 Extender</u>	added	

Version 1.8.0:

Chapter / Section	State	Note
<u>52-6710A - XR Router/DSP Sync Module</u>	changed	Information changed.

Version 1.7.0:

Chapter / Section	State	Note
<u>52-5320A - XD/XR GPIO Module, 16 out, 4 in</u>	added	Pin assignment.
<u>52-5320A - XD/XR GPIO Module, 16 out, 4 in</u>	added	Meaning of the LEDs.

Version 1.6.0:

Chapter / Section	State	Note
<u>Configuring MADI Redundancy</u>	changed	Picture added.

Version 1.5.0:

Chapter / Section	State	Note
<u>52-5310A - MB/XD/XR GPIO Module, 8 out, 4 in</u>	added	Pin assignment.
<u>52-5311A - MB/XD/XR GPIO Module, 8 out, 4 in</u>	added	Pin assignment.

Chapter / Section	State	Note
<u>52-6710A - XR Router/DSP Sync. Module</u>	added	Pin assignment.
<u>52-6720A - XR True Output Monitoring</u>	added	Pin assignment.
<u>52-6120A - XR Dual MAD I Module, multimode</u>	added	Meaning of the LEDs.
<u>52-6125A - XR Dual MAD I Module, single mode</u>	added	Meaning of the LEDs.
<u>52-6129A - XR Dual MAD I Module, multi/single</u>	added	Meaning of the LEDs.
<u>52-5310A - MB/XD/XR GPIO Module, 8 out,4 in</u>	added	Meaning of the LEDs.
<u>52-5311A - MB/XD/XR GPIO Module, 8 out,4 in</u>	added	Meaning of the LEDs.
<u>52-6440A - XR Router/DSP Kernel Module 4096</u>	added	Meaning of the LEDs.
<u>52-6442A - XR Router/DSP Kernel Module 2048</u>	added	Meaning of the LEDs.
<u>52-6850A - XR Comm. Controller, red.</u>	added	Meaning of the LEDs.
<u>52-6851A - XR Communication Controller</u>	added	Meaning of the LEDs.
<u>52-6710A - XR Router/DSP Sync. Module</u>	added	Meaning of the LEDs.
<u>52-6720A - XR True Output Monitoring</u>	added	Meaning of the LEDs.

Version 1.4.0 and before:

No changelog available.

4 General Information

Safety Instructions

Ignoring the following safety instructions may lead to accidents with severe, life-threatening injuries, caused by fire or electric shocks.

Always act according to the directions of this manual.

Fix the device well in a rack or studio furniture with the mounting orientation given by DHD.

Only connect the power cable of the device to a socket, which carries the voltage stated on the specification plate.



Important

Make sure that the ventilation openings of the device are not covered and that the environmental temperature is ok to assure sufficient heat flow. (See Installation Guide)

Do not place heavy objects on the device.



Important

Do not place drinking vessels or any other vessels with liquids on the device or close to it.

The device or parts of the device can get very warm during the usage. Please be careful when touching the device after a longer operating time.



Important

Changes according to hardware configuration may only be done by qualified personnel (e.g. exchanging modules).

Care Instructions



Important

The cleaning of a device should be done in Off-Air mode as possible. That means the device does not handle relevant audio and/or logic signals that are integrated in the current broadcasting process.

To clean your DHD device, in general a soft, lint-free and dry cloth is sufficient. In case of severe soiling, you can use a damp cloth and household detergent.



Important

If a damp cloth is used for cleaning, you have to switch off the DHD device and to disconnect all hot cables from it.



Warning

Never use a dripping wet cloth. **In no case** water and/or cleaner may enter the device, since this could lead to electric shocks and fires!



Warning

Never use solvent or thinner for cleaning the surfaces. Furthermore, **do not** use abrasive as well as sharp objects for cleaning. You will damage the surface of the device.

5 Assemble a Device

Every device is getting assembled individual depending on your special needs. Therefore, different hardware modules, as well as configuration and control software applications are available.

If you need help to define your requirements for an 52/XR, please contact your local DHD partner.

5.1 List of Modules



Weblink

Go to the 52/XR MADI Router area on our [Website](#) to find a current version of the detailed list of modules for the 52/XR MADI Router.

At that time, this manual is written, the following modules are available for the 52/XR MADI Router:

I/O Frames

- 52-6063A - XR Router/DSP Frame 3HU, empty
- 52-6066A - XR Router/DSP Frame 6HU, empty

Power Supply & PoE Switch

- 52-5048A - Power Supply Module 48V / 200W
- 52-5088A - PoE Switch Module

Controller Modules

- 52-6440A - Router/DSP Kernel Module 4096
- 52-6442A - Router/DSP Kernel Module 2048
- 52-6850A - Comm. Controller, red.
- 52-6851A - Communication Controller
- 52-6710A - Router/DSP Sync. Module
- 52-5860A - RS232/RS422 Extender
- 52-5862A - RS232/RS232 Extender

I/O Modules

- 52-6120A - Dual MADI Module, multimode
- 52-6125A - Dual MADI Module, single mode
- 52-6129A - Dual MADI Module, multi/single
- 52-6720A - True Output Monitoring
- 52-5310A - GPIO Module, 8 out,4 in
- 52-5311A - GPIO Module, 8 out,4 in
- 52-5320A - GPIO Module, 16 out,4 TTL in

Software

- 52-8550 - Routing/Scheduling Software
- 52-8551 - Routing Software
- 52-8552 - Routing Software, single matrix
- 52-8553 - Additional license for 52-8550
- 52-8554 - Additional license for 52-8551
- 52-8555 - Monitoring Software
- 52-8571 - Pro-Bel Protocol SW-P-02
- 52-8572 - ESAM-II control protocol

5.2 Redundancy Options

If required, you can operate the 52/XR MADi Router in several redundant ways.

Power Supply Redundancy

An 52/XR MADi Router can be equipped with a redundant power supply pack. Thus, the internal and external electric power supplies of the device becomes more reliable.



Tip

We recommend to feed power supplies from different mains supply systems to prevent power failures.

The 52/XR MADi Router can optional be operated with two power supplies of the type 52-5048 (48V/200W).

Sync Module Redundancy

An 52/XR MADi Router can be equipped with a redundant synchronisation module. Thus, the device becomes more reliable concerning the internal and external synchronisation.

The 52/XR MADi Router can optional be operated with two synchronisation modules of the type 52-6710.

More information on the synchronisation and its configuration can be found in the section [Synchronisation](#).

Controller Redundancy

An 52/XR MADi Router can be equipped with a redundant communication controller module. Thus, the device becomes more reliable concerning the communication in the configuration and controlling network (communication with configuration PCs).

The 52/XR MADi Router can optional be operated with two communication controller modules of the type 52-6850.

Please see the section [Controller Redundancy](#) for more information.

Router / DSP Kernel Redundancy

An 52/XR MADi Router can be equipped with a redundant Router / DSP Kernel module. Thus, the device becomes more reliable concerning the routing and DSP processing.

The following Router / DSP Kernel redundancy options are possible for the 52/XR MADi Router:

	Router / DSP Kernel module of the type 52-6440	Router / DSP Kernel module of the type 52-6442
3 HU frame	two modules	two modules
6 HU frame	two modules (if only the upper backplane is used) or four modules (if the upper and the lower backplane are equipped with redundancy)	two modules (if only the upper backplane is used) If you want to use both backplanes of an 6 HU 52/ XR, you have to use modules of the type 52-6440.

It is not possible to use Router / DSP Kernel modules of different types in one device!

MADI Redundancy

The MADI modules in the slots 13 to 18 (and in the slots 34 to 39 in a 6 HU frame) can be configured as redundancy for the corresponding modules of the slots 3 to 8 (and the slots 24 to 29 in a 6 HU frame). That means, if you want to safeguard the channels of the MADI module in slot 5, you have to plug the redundant module into slot 15 and to assign this module to be redundant with the configuration software Toolbox5.

Please find more information on the MADI redundancy and its configuration in the section [Configuring MADI Redundancy](#).

5.2.1 Controller Redundancy

How to set up communication controller redundancy if one or both modules are running the firmware version 06.05.11 or older?




Important

Please read the following instructions on setting up communication controller redundancy carefully, before you start to implement the controller redundancy.

To use controller redundancy, you need two 52-6850 Communication Controller modules. It is not possible to use 52-6851 controllers or a mixture of both types for redundancy applications.

Please read the following notes on updating the firmware carefully, before you plug the controller modules into the slots 2 and 19 of the 52/XR MADI Router frame. Afterwards interconnect the upper RJ45 connectors (the controller replication ports) with each other via a **crossed** CAT5 cable.

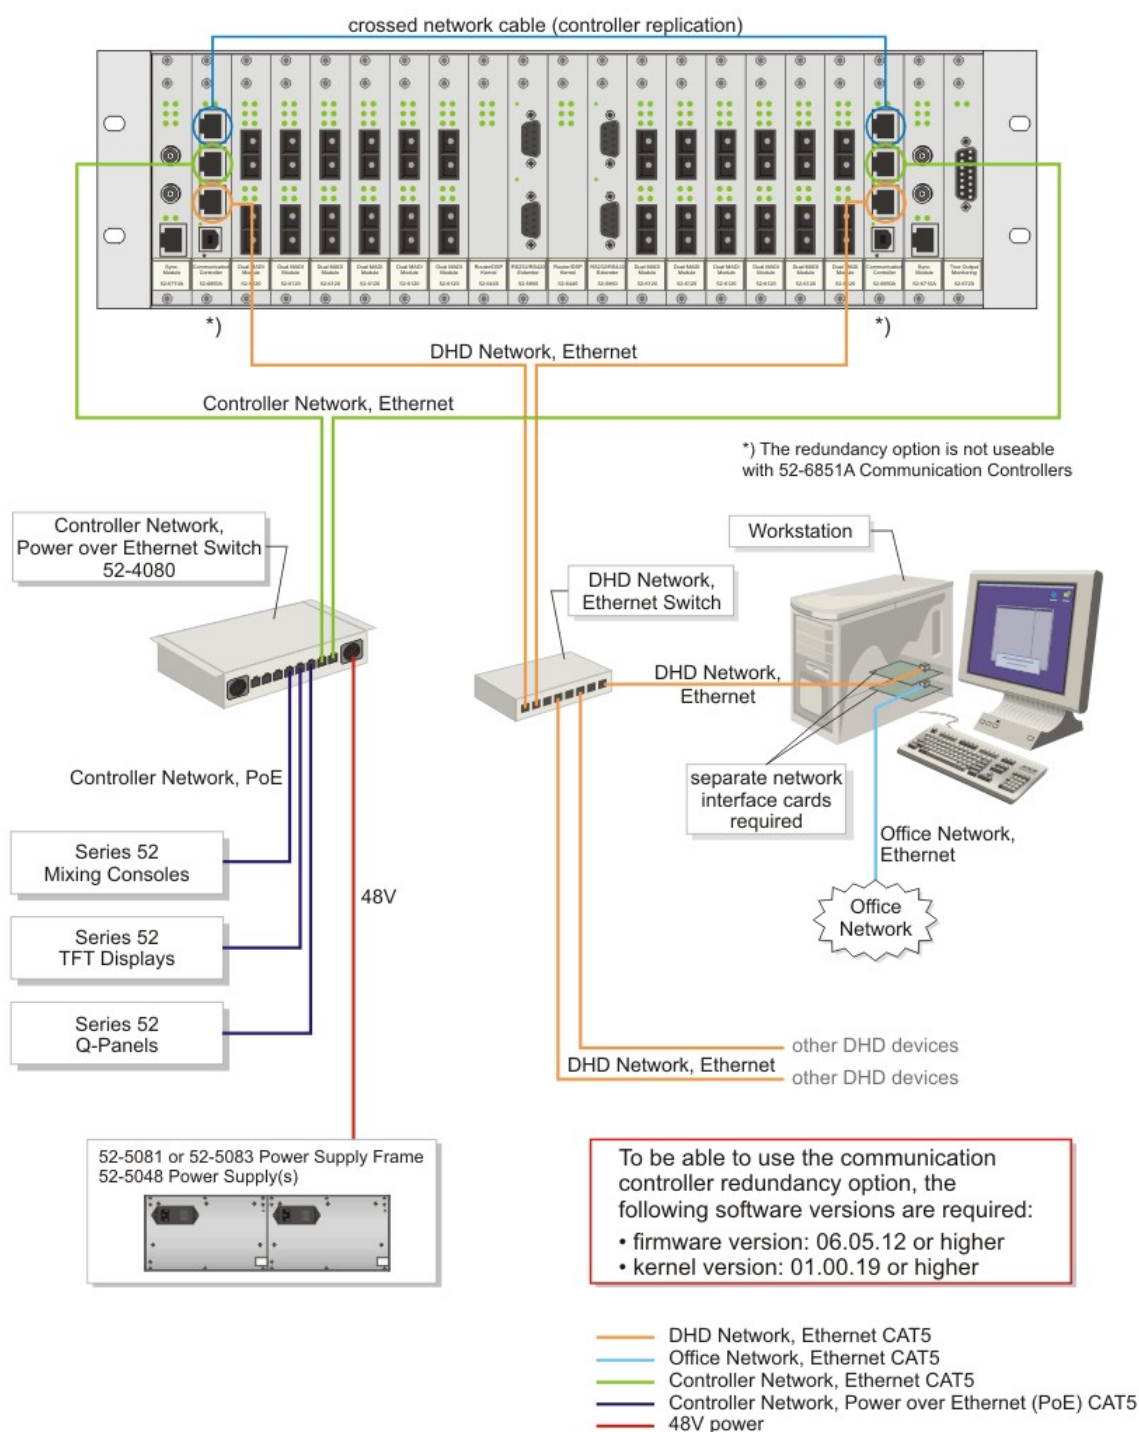

Redundant wiring of Communication Controller modules in 52/XR MADI Router frames.

Under normal circumstances the module on slot 2 is the master and the module on slot 19 is the slave. If the module on slot 2 drops out, the module on slot 19 becomes master. After you have plugged a functional module to slot 2, this module not directly becomes master. Not until something happens that makes it necessary or useful to swap the controller priority (e.g. the module on slot 19 drops out, the device is switched off and on or the firmware is restarted), the master state is assigned to the module on slot 19. In the DHD Communication Server and the DHD Connection Dialog of the Toolbox5, the slave controller is marked with a dollar symbol (\$) in front of the Device ID. Furthermore, you can find an information in the Maintenance window, if an controller is running as master or slave. Press the F7 key in the Toolbox5 software to open the Maintenance window. Mark the desired controller in the list on the left hand side of the window and choose Firmware. The entry Running as in the main section of the window shows the respective state of the controller (

MASTER OR SLAVE).

Both controllers need to be connected to the DHD network and the Controller network. If you need to add additional switches, please note the [DHD Network Specifications](#).

Update the firmware of the controller modules one after each other. Therefore, unplug the slave controller module and update the firmware of the master. Afterwards, unplug the master module and plug in the slave controller to update the slave module. Moreover, the installed firmware version must support the controller redundancy option (firmware version 06.05.12 or higher). The same applies to the kernel version (kernel version 01.00.19 or higher).



Important

Do **never** use the firmware versions 06.05.12 or higher together with older firmware versions in the communication controllers of the same frame simultaneously.

You have to transfer the Toolbox5 configuration to the master controller. The module or the slot itself is not important, only that the module is currently running as master. The slave automatically gets a copy from the master. It is not useful to transfer a configuration to the slave controller, since it is overwritten by the version saved in the master. Please note that this copying process may take some minutes.

How to upgrade the firmware if the communication controller redundancy is already in use?

With the above mentioned procedure you loose the connection to the device, because in this process both communication controller modules need to be unplugged. If the communication controller redundancy is already working, you can use another way to avoid this interruption. Proceed as follows if the currently installed firmware version on the communication controller modules is 06.05.12 or higher:

- Update the firmware of the SLAVE controller and execute a firmware reset. This step does not influence the audio signal flow, because the SLAVE controller is not in use at this time.
- Afterwards, update the firmware of the MASTER controller and execute a firmware reset. The SLAVE controller takes over and becomes MASTER. Vice versa the previous MASTER changes to SLAVE mode. This step will interrupt the audio for approx. 1 or 2 seconds.

6 Connecting the Device to a PC

The configuration of an 52/XR MADi Router is done with the aid of a PC. Usually an ethernet interface is employed for this connection. The next section describes how to configure and use this interface of the communication controller.

In addition to the ethernet interface, each controller module has an USB interface. It replaces the RS232 interface known from the former DHD systems, but the transfer rate of the USB interface is comparable with the ethernet connection. Please follow [this description](#) to start the operation of the USB interface.

6.1 Configuring the Ethernet Interface

Every 52/XR MADi Router is equipped with an ethernet interface (with two ethernet interfaces in case of controller redundancy). The interface - an RJ45 female connector - is located on the communication controllers. It is a standard twisted pair interface with a data transfer rate of 100Mbit/s. The interface complies with the 100Base-TX, IEEE 802.3u standard.

The ethernet connection of the 52/XR MADi Router allows communication with DHD application software, as well as with conventional applications like Telnet and web browsers on one or more PCs.



Important

Please urgently note the network specifications before using the ethernet interface of a 52/XR MADi Router.

If the 52/XR MADi Router is not run according to the network specifications, DHD cannot guarantee the proper operation of the device.

6.1.1 IP Basic Settings

Before delivery, each 52/XR MADi Router is configured with an IP basic setting. This setting accords to a certain pattern, unless the customer indicates different requirements in his order.

Each controller with an integrated ethernet interface has a dedicated network address, the so-called MAC address (MAC - Media Access Control). This address is always unambiguous and unique. DHD owns the MAC address range 00:0A:63:00:00:00 to 00:0A:63:FF:FF:FF, therefore this address is also referred as serial number of a DHD device.

A network-compatible controller module is always identified in a network by its MAC address. As the first 3 Bytes of all DHD MAC addresses always are identical, only the last 3 Bytes are indicated in DHD software applications.



Note

If you find the term "MAC address" in the context of a DHD system, it always refers to the last three Bytes of the actual address, although this is, strictly speaking, incorrect.

These last 3 Bytes of the MAC address are used for composing the IP address for the basic setting. Please find below an example for the MAC address 10:00:02:

- Every single Byte is translated into the decimal format: 10h = 16, 00h = 0, 02h = 2
- Afterwards the decimal numbers are strung together; 10 is prepended, and all numbers are separated by periods: 10.16.0.2

The subnet mask is automatically set to 255.0.0.0, according to the classification of this IP range.


Thus the following IP basic setting results for the example device:

- IP address: 10.16.0.2
- Subnet mask: 255.0.0.0

Please learn in the following chapter how to change these settings and adjust them to your IT environment.

6.1.2 IP Configuration

The IP settings of a 52/XR MADI Router are no longer defined in the configuration file, but directly in the systems communication controller. To set IP parameters, please use the Maintenance Window, an application, which is implemented in Toolbox5. You can open the Maintenance Window by clicking the according command in the View menu or by pressing F7 on your keyboard. The application opens in a window with three sections:

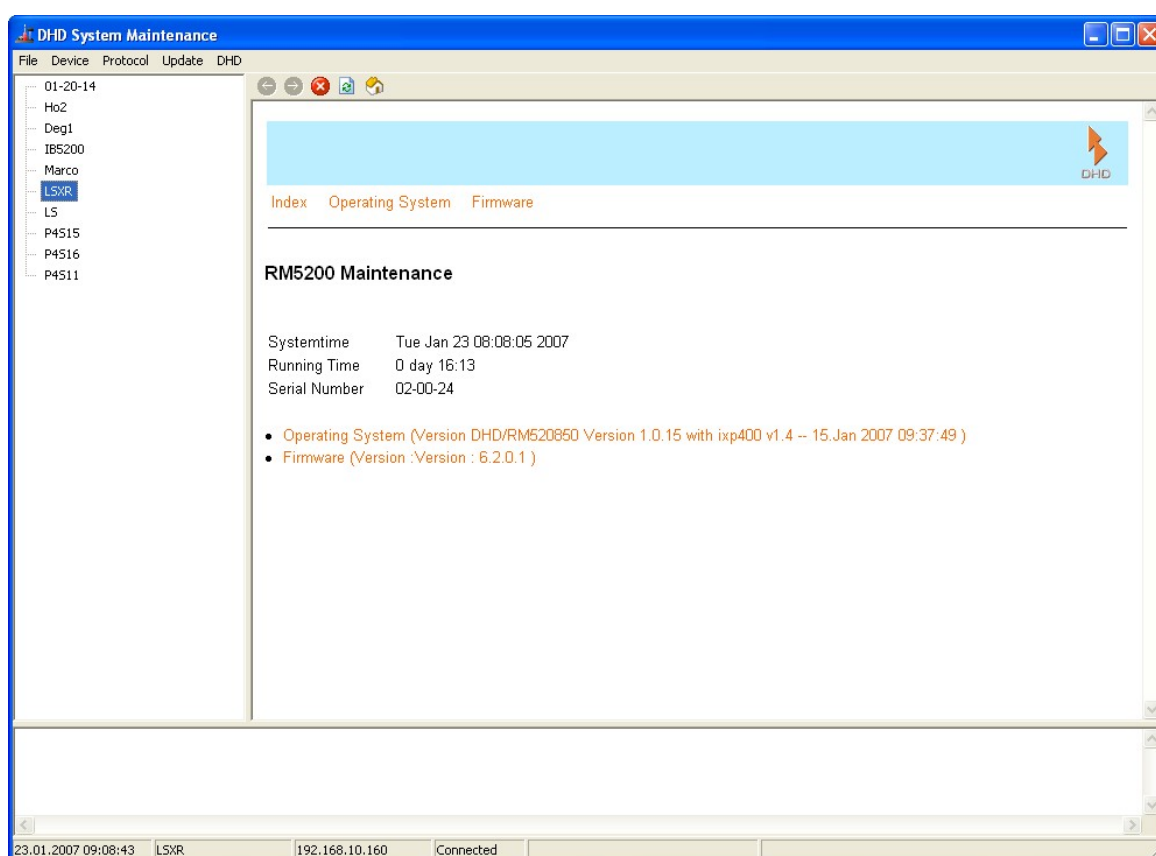

View of the Maintenance window after opening.

In the left upper part of the window, beneath the menu bar, you can see a list of the Series 52 systems accessible in the network. On the right side next to it, in the largest part of the window, you can see system information of the device which is selected in the left-handed list. Above the status bar in the lower part of the window, current messages are displayed, sent by DHD systems in the reachable network.

You have two options to adjust the IP settings of a Series 52 system, depending on the following conditions:

- a. You can see the respective device in the list in the left part of the maintenance window.
- b. You **cannot** see the respective device in the list in the left part of the maintenance window.

If you can see the device in the list (a)

1. Right-click on the displayed device name.
2. A context menu appears. Select the `Network Config...` command from this menu.
3. A window opens, displaying the current IP configuration of the device.

The screenshot shows a 'Network Config' window with the following fields and buttons:

- Device Section:**
 - Serial No: 020024 (with a 'Retrieve Current' button next to it)
 - Hardware Name: LSXR
- Network IP Address Section:**
 - Radio buttons for 'Automatically via DHCP' (selected) and 'Fixed'.
 - IP Address: 10.2.0.36
 - Subnet Mask: 255.0.0.0
 - Gateway: 10.0.0.1
 - Broadcast: 255.255.255.255
- Time Section:**
 - Time Server: 192.168.10.5 (with a 'Setup time zone and DST ...' button next to it)
- Mail Section:**
 - Mail Server: 0.0.0.0
- Buttons:** 'Send' and 'Close' at the bottom right.

The Network Config window shows the current IP configuration of the device with the serial number which is entered in the Serial No text field.

Serial No - The Serial Number

The device of which you can see the network settings, is always represented by its serial number (Serial No). This serial number is unambiguous and is only valid for one single controller. You can use the field to read out settings of devices that are located in a different network segment. Read more about this in section "If you do not see the device in the list (b)".

Hardware Name - The Device Name

You can provide every Series 52 system with a device name (Hardware Name) which will specify the device. This name will help you to identify the device in the network. You can choose any name up to 20 characters; however, no space characters are allowed. Not allowed special characters are rejected on entering.

Automatically via DHCP - Automatic IP Assignment by a DHCP Server

If there is a DHCP server on the network, which is also supposed to carry out the IP configuration of the 52/XR MADI Router, please just select the Automatically via DHCP radio button.

Fixed - Fixed IP Setting

If you cannot access a DHCP server or you want manually carry out the IP configuration, please first select Fixed and then fill in the according values (IP Address, Subnet Mask, Gateway, Broadcast) into the activated text fields.



Important

In case of questions about the parameters to be set, please contact your IT department or your network administrator.

Mail Server

This text field has no function yet and does not need to be filled in.

Time Server

Series 52 systems run with an internal system time which can be synchronised to a time server (NTP - Network Time Protocol). For this, please enter the IP address of your time server in the text field `Time Server`.

If you cannot see the device in the list (b)

1. Click on the `Device` command in the menu.
2. Select the `Network Config...` command from this menu.
3. The `Network Config` window will open; all its text fields are empty.

The screenshot shows the 'Network Config' window. The 'Device' section has 'Serial No:' set to '020024' and an empty 'Hardware Name:' field. A 'Retrieve Current' button is next to the serial number. The 'Network IP Address' section has 'Automatically via DHCP' selected. The 'Time' section has an empty 'Time Server:' field and a 'Setup time zone and DST ...' button. The 'Mail' section has an empty 'Mail Server:' field. At the bottom are 'Send' and 'Close' buttons.

Enter the serial number of the device, for which you want to change the IP configuration, in the "Network Config" window.

4. Enter the serial number of the device into the `Serial No` text field. Hit the `Retrieve Current` button afterwards.

This will send a query into the network, searching for network devices outside of the subnet. If the 52/XR MADI Router should be located outside of the subnet of the PC, it will answer anyway and transmit its current IP settings. The settings are then displayed in the `Network Config` window, where you can change them.

You can change the data according to the principle described in the section "If you can see the device in the list (a)". The process is completed when you send the changed data to the device by hitting the `Send` button.


6.2 The USB Interface

You can connect 52/XR MADi Router devices to a PC via USB. The 52-6850 and 52-6851 modules have an according USB interface (B type, USB 2.0). Use the interface for instance in case you do not want an ethernet connection or if you want to locally connect a PC to the 52/XR MADi Router for maintenance purposes. In order to use the USB interface of the 52/XR MADi Router, first you have to install a driver on your PC.

Installing the USB Driver


For this installation you need the file `MX-XR_usb-install.inf`. An access to the DHD-update download area is required, to be able to download this file. Please contact DHD or your DHD sales representative if you need this file and you don't hold a login for this website.

Connect the device to your configuration PC and switch it on. Microsoft Windows (TM) automatically opens the "Found New Hardware Wizard". Alternatively, click onto the `Hardware` icon in the `control panel` to open this dialog.

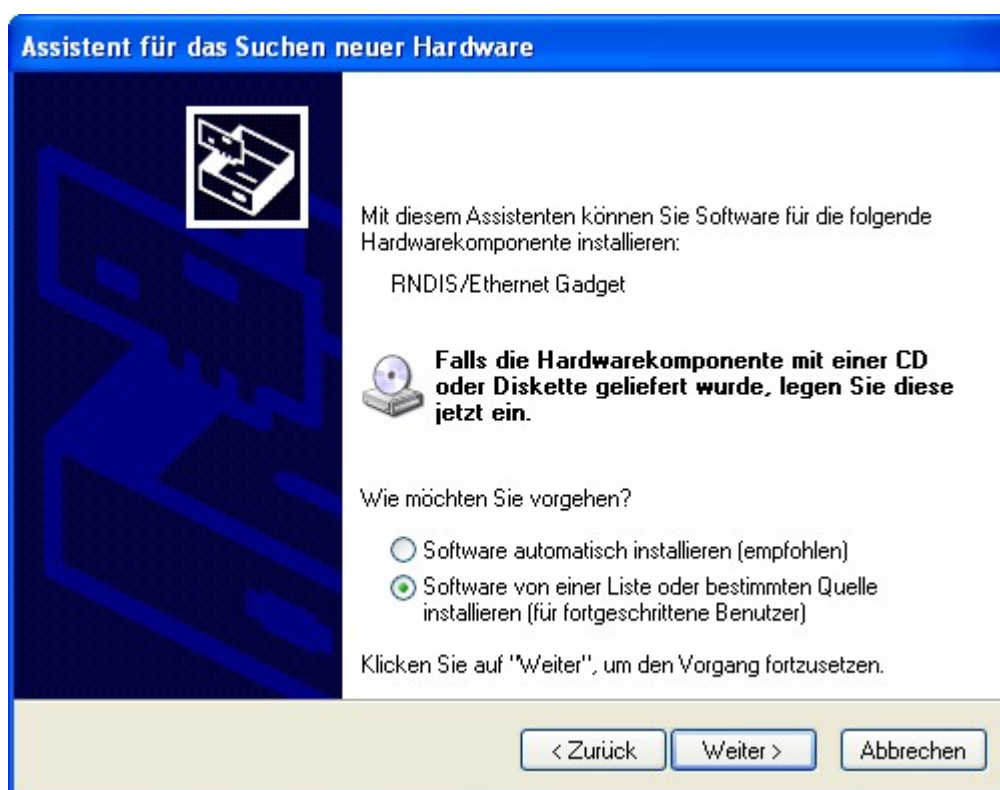

Step 1: Identification of the new hardware.

Select "Install from a list or specific location" and click `Next`.

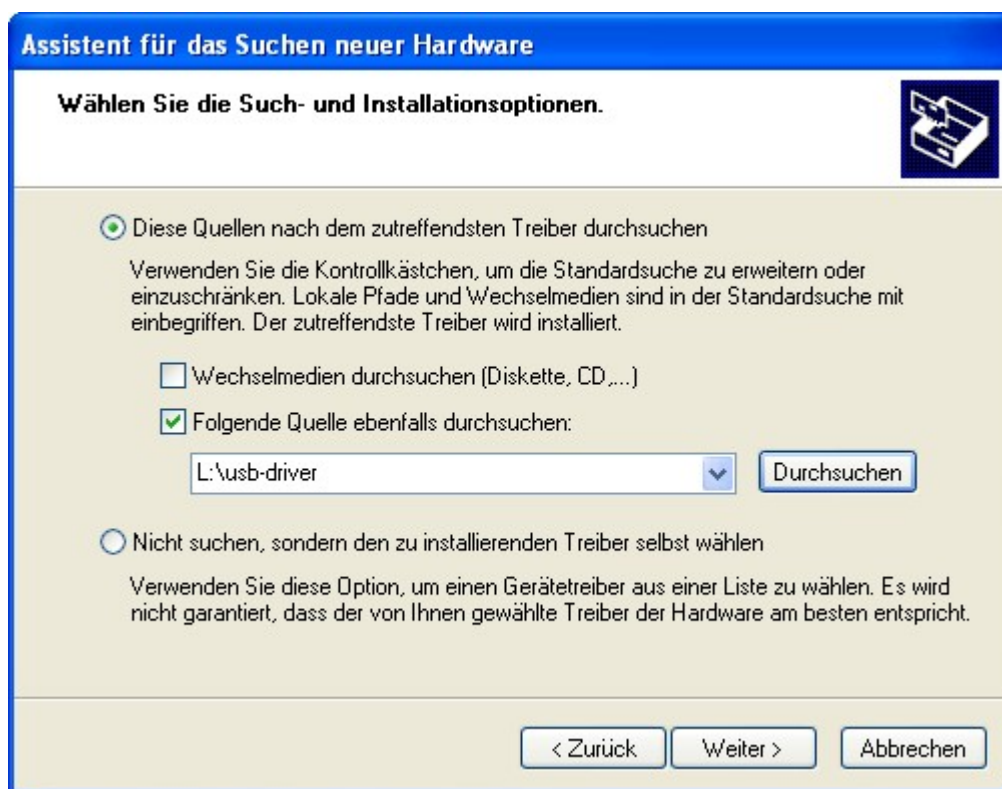


Step 2: Setting the path.

Enter the drive and if necessary the folders, to define the path to the file `MX-XR_usb-install.inf` and click Next.




Step 3: Installing the driver.

The driver now gets installed.

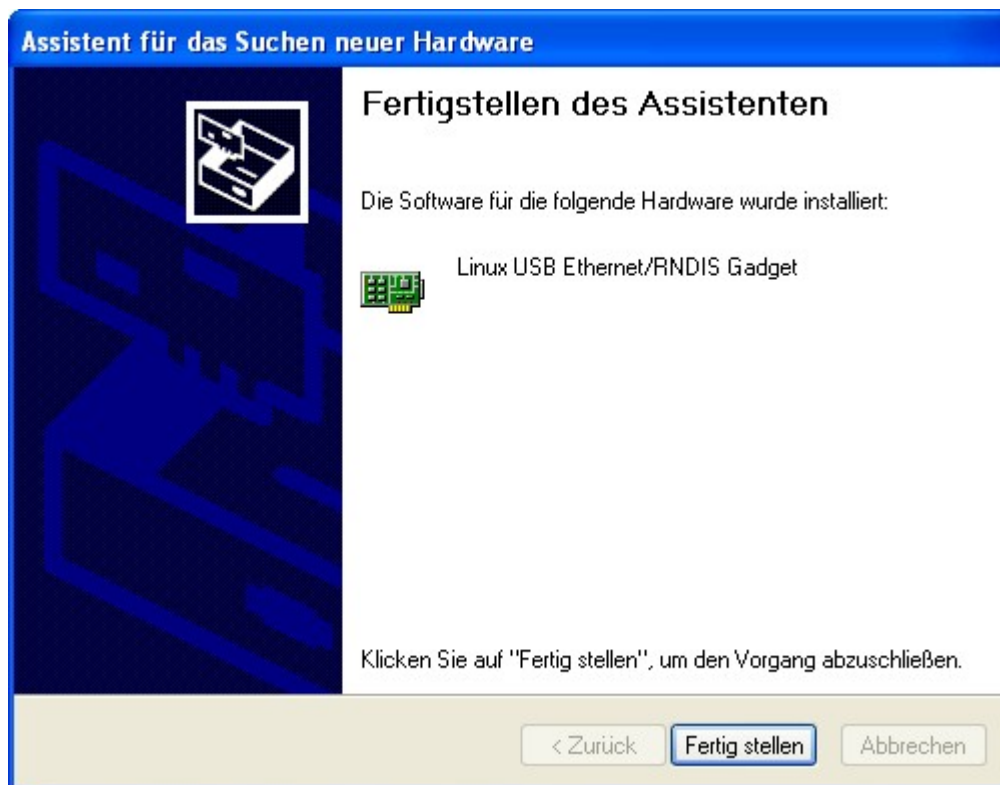

Step 4: Finish the installation.

Finally the "Found New Hardware Wizard" will tell you that it has finished the installation and you can end the process by clicking the **Finish** button. From now on you can communicate with the device via the USB interface.

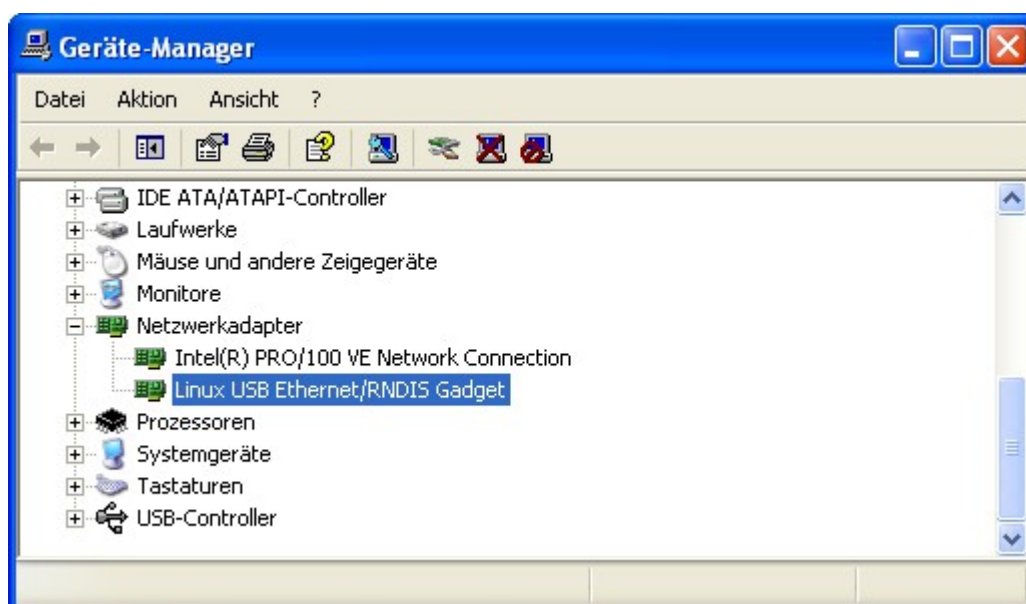

The device manager of the Windows (TM) control panel.


After the driver has been installed properly, the connection to the USB interface is simulated as a network connection. Therefore, you **don't** need to choose the USB connection in any DHD software application, because it is seen as a network connection.

Please contact your IT department or your administrator if you need help to install the driver.


7 Configuration and Operation of an 52/XR MADI Router

7.1 Configuring with the Toolbox5 Software

The configuration software is represented by a executable file named `Toolbox5.exe`. Double click the file `Toolbox5.exe` to start the application.


	Note
<p>In this manual only the most important steps to configure an 52/XR MADI Router with the Toolbox5 software are mentioned. Please find a comprehensive description of the configuration software Toolbox5 and its functions in the Toolbox5 manual.</p>	

When starting the Toolbox5 for the first time, a second application is extracted, called DHD Communication Server (`DHDCS.exe`). This software is handling the complete communication between DHD Devices and DHD applications on a PC. To learn more about the DHD Communication Server, please refer to the RM4200D manual, Part 6 "Application Software Manuals, Chapter 1 - The DHD Communication Server". The corresponding manual file is called "RM4200D_6_appsoftware_en.pdf".

	Weblink
<p>You can find the above mentioned manual on our website:</p>	
<p>http://new.dhd-audio.biz/dhd_files/doc/6_appsoftw/html_en/start.html</p>	

The Toolbox5 software does not need any dynamic libraries or other additional files to run. Simply copy the file `Toolbox5.exe` to the desired directory and start it. To uninstall, delete the files `Toolbox5.exe` and `DHDCS.exe`.

After the software has started, it displays an empty project list and some basic project properties, which can be customized.

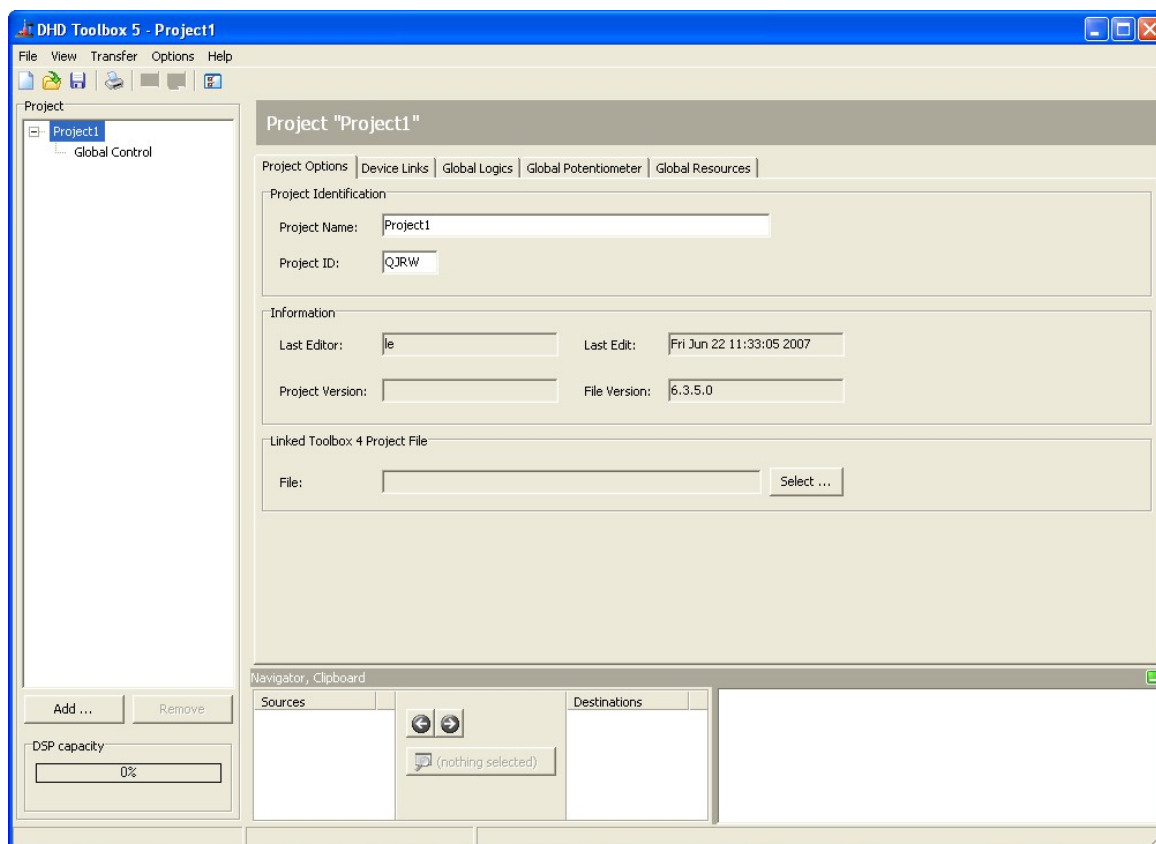

The Toolbox5 application window right after startup.

From here on, you have two ways to proceed:


1. You can create a new project to setup one or several routing devices from scratch.
2. You can load an existing project file (*.dp5) from your PC to edit the configuration of the existing devices.

A project is representing a collection of DHD Series 52 devices. Devices inside the same project are able to communicate with each other. This interoperability is comfortable to configure functions between several devices of one installation, e.g. talkback or on-air switching.

7.1.1 Add Devices

Below the project tree you can find the **Add...** button. A menu with devices - which can be added to the project - appears after clicking this button. Choose the entry **Add 52/XR Router** from this menu to add an 52/XR routing device to the project. Press **Remove** if you want to delete a device of the project tree.

Alternatively, you can reach this function via a context menu by right-click the project tree or the area around the project tree.

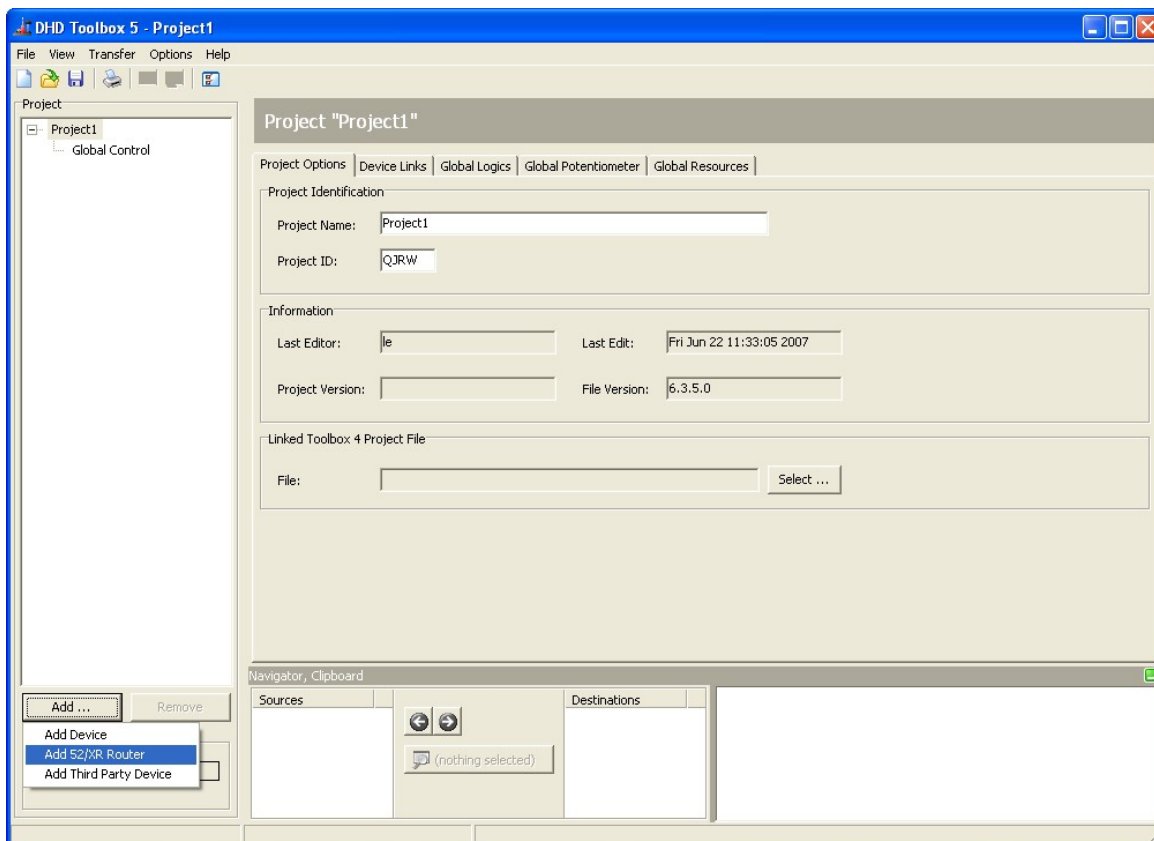

Add a routing device.


Select a 3 HU Frame (52-6063) or a 6 HU Frame (52-6066) in the pull down menu **DSP Frame Type**.

7.1.2 DSP Frame I/O Configuration

Click onto the + sign in front of the device label to reach the sub-branches of the device configuration.

On the DSP Frame I/O tab, the hardware layout of the routing device can be configured.

The selected frame size influences the number of configurable inputs and outputs in the Toolbox5, but it has no direct influence concerning the functionality of the hardware. Depending on the chosen router frame, in the DSP Frame I/O 21 or 42 slots (actual 36 configurable slots) can be configured.

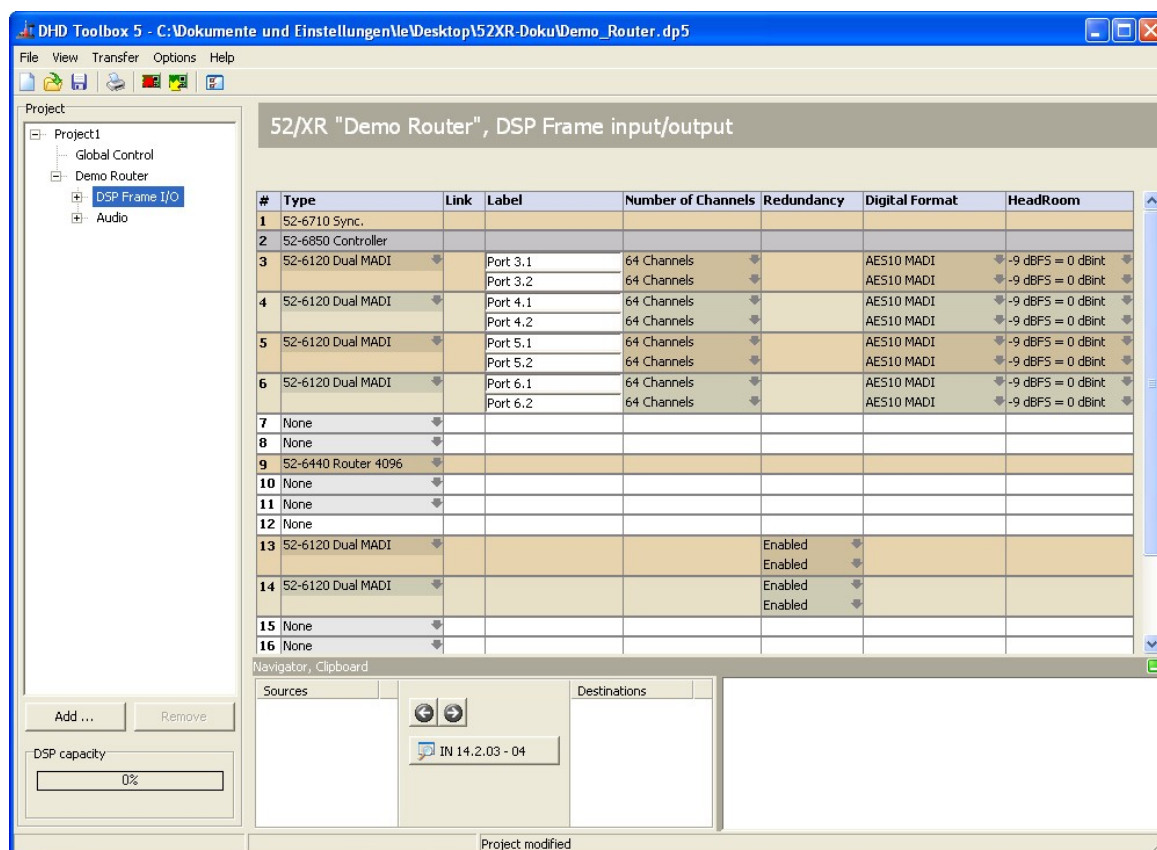

If DSP Frame I/O is selected, the currently configured layout of the router is shown.

Slot 3 to 8 and 13 to 18 (as well as the slots 24 to 29 and 34 to 39 in a 6 HU frame) contain the MADI modules. Slot 13 to 18 (and 34 to 39 in a 6 HU frame) can be operated in a normal or a redundant mode. Please find more information on MADI redundancy in the section [Configuring MADI Redundancy](#).

On the slots 3 to 8 and 13 to 18 (as well as 24 to 29 and 34 to 39 in a 6 HU frame) you can configure MADI and GPIO modules. The 52-6120 Dual MADI entry stands for all available MADI modules. Select the 52-6120 even if you use other MADI modules (52-6125 or 52-6129). To make the configuration process easier, the labels of the MADI ports as well as the GPIOs can be customized.

Additionally, you can set the Number of Channels for each MADI port. You can use all 64 channels of the MADI signal or only the first 56 channels. Moreover, it is possible to configure a linked 52/MB MADI Breakout System. By choosing this option, in the course of the configuration you will have some special setup possibilities for the linked 52/MB. More information on the configuration with a linked 52/MB can be found in the section [Linked 52/MB at a MADI Port](#).

In the next column you choose, whether the digital format should be AES10 MADI or 32bit float. Headroom allows to adjust a corresponding level, which should refer to the internal reference level of 0 dBint.

**Important**

You need at least 3 modules to operate an 52/XR MADI Router. These modules are inserted into the DSP Frame I/O layout by default.

- Slot 1: 52-6710 Sync Module
- Slot 2: 52-6850 Communication Controller
- Slot 9: 52-6440 Router Kernel

You are allowed to change the type of the preconfigured router kernel (type 52-6442 supports 2048 channels, type 52-6440 supports 4096 channels), but at least one routing kernel is necessary for operation.


For each of these preconfigured, essential modules, you can configure a redundant module in the designated slot of the DSP frame.

Inserting a redundant module into the DSP Frame I/O does not automatically enable the redundancy for this part of the system. Make sure to insert redundant hardware into your frame, too.

7.1.3 Configure and Label Single Inputs and Outputs

Click onto the + sign in front of the DSP Frame I/O branch and select an existing MADi port to reach the channel configuration.

If the Number of Channels is set to 64 or 56, you can switch channels to mono or stereo and set a label for each single input and output here. Additionally, you can set a local level adjustment for single inputs and outputs, which differs from the global settings.

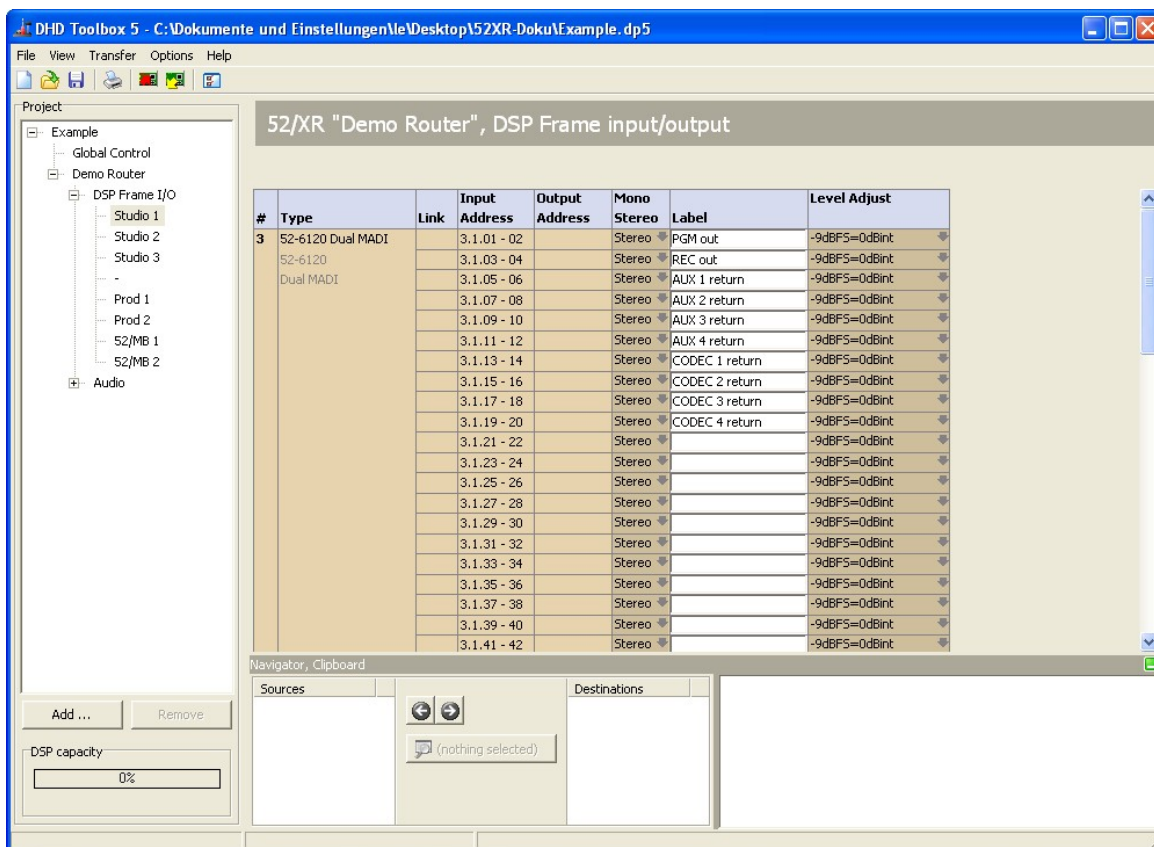

The Toolbox5 shows the inputs and outputs of a chosen MADi Port.

7.1.4 Configuring MADI Redundancy

Slot 13 to 18 (and slot 34 to 39 in a 6 HU frame) can be operated in normal or redundant mode. If switched to redundant, a MADI port duplicates the signals of the corresponding port on the left side of the router backplane.

Choose **Enabled** in the column **Redundancy** at the **DSP Frame I/O** to define the respective MADI port as redundant. If the corresponding module on the left side fails, the redundant module on the right side will automatically take over.

Example

The MADI ports of slot 13 and 14 are switched to be redundant. Now they are carrying the same output signals as the MADI ports of slot 3 and 4. They should be fed with redundant input signals of the MADI ports 3.1, 3.2, 4.1 and 4.2.

52/XR "Demo_Router", DSP Frame input/output

☐ Show GPIOs

#	Type	Link	Label	Number of Channels	Redundancy	Digital Format	HeadRoom
1	52-6710 Sync.						
2	52-6850 Controller						
3	52-6120 Dual MADI		Port 3.1 Port 3.2	64 Channels 64 Channels		AES10 MADI AES10 MADI	-9 dBFS = 0 dBint -9 dBFS = 0 dBint
4	52-6120 Dual MADI		Port 4.1 Port 4.2	64 Channels 64 Channels		AES10 MADI AES10 MADI	-9 dBFS = 0 dBint -9 dBFS = 0 dBint
5	52-6120 Dual MADI		Port 5.1 Port 5.2	64 Channels 64 Channels		AES10 MADI AES10 MADI	-9 dBFS = 0 dBint -9 dBFS = 0 dBint
6	52-6120 Dual MADI		Port 6.1 Port 6.2	64 Channels 64 Channels		AES10 MADI AES10 MADI	-9 dBFS = 0 dBint -9 dBFS = 0 dBint
7	None						
8	None						
9	52-6440 Router 4096						
10	None						
11	52-6440 Router 4096						
12	None						
13	52-6120 Dual MADI				Enabled Enabled		
14	52-6120 Dual MADI				Enabled Enabled		
15	52-6120 Dual MADI		Port 15.1 Port 15.2	64 Channels 64 Channels	Disabled Disabled	AES10 MADI AES10 MADI	-9 dBFS = 0 dBint -9 dBFS = 0 dBint
16	52-6120 Dual MADI		Port 16.1 Port 16.2	64 Channels 64 Channels	Disabled Disabled	AES10 MADI AES10 MADI	-9 dBFS = 0 dBint -9 dBFS = 0 dBint
17	None						
18	None						
19	None						
20	None						
21	None						

Navigator, Clipboard

Sources: (nothing selected)

Destinations:


DSP capacity: 0%

Project modified

Toolbox5, DSP Frame I/O; The MADI ports of slot 13 and 14 are switched to redundant.

7.1.5 Linked 52/MB at a MADI Port

If a MADI port was linked to an 52/MB MADI Breakout System, you are able to define the layout of the connected 52/MB device here. Basically, this part of the configuration is to make the whole configuration process easier. The 52/MB hardware itself must not be configured.

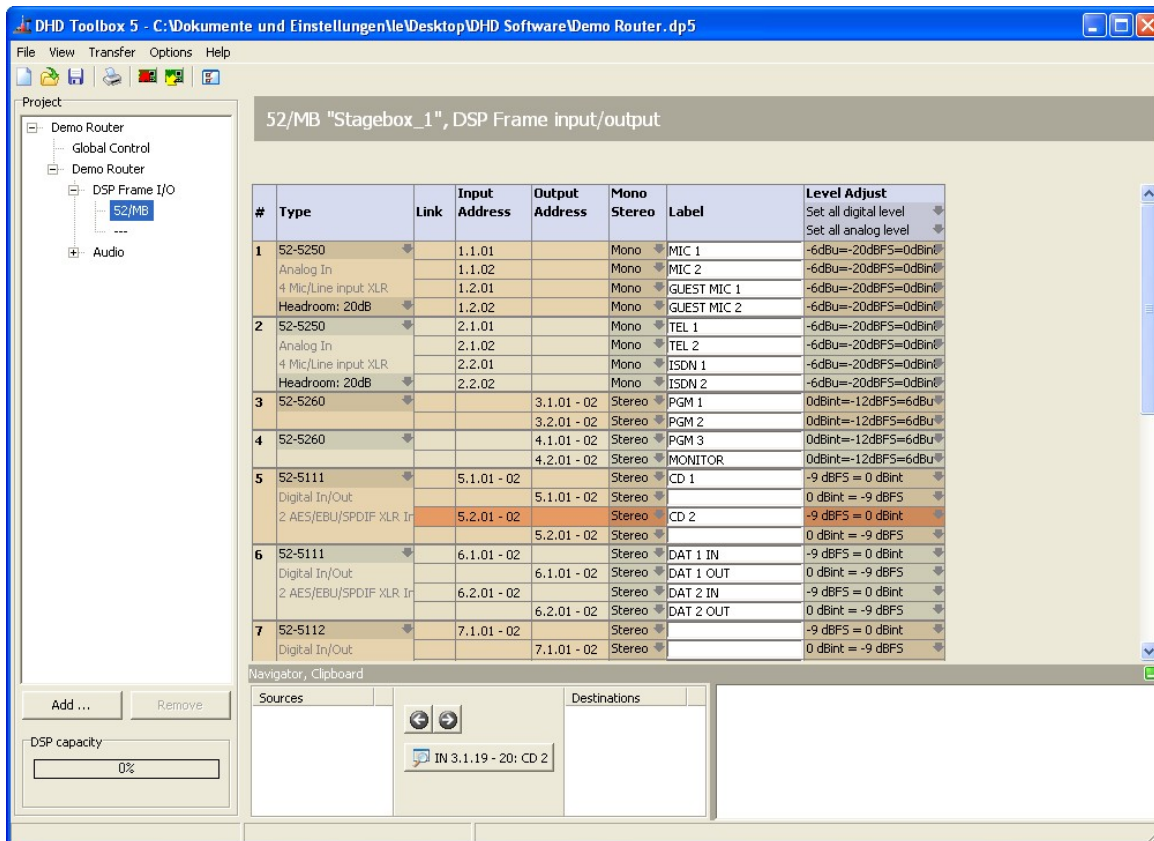

I/O configuration of a linked 52/MB.

The following modules can be configured in an 52/MB frame:

Slots 1 to 14:

- **52-5111** XLR Digital In/Out Module, 4ch.
- **52-5112** XLR Digital In/Out Module, 4ch.
- **52-5170 (4in/4out or 8in or 8out)** HD-SDI Audio Module
- **52-5210** XLR Analog In Module, 4ch.
- **52-5213** XLR Analog In Module, 4ch.
- **52-5220** XLR Analog Out Module, 4ch.
- **52-5223** XLR Analog Out Module, 4ch.
- **52-5230** XLR and Combined XLR/Jack Socket Analog In/Out Module, 2ch.
- **52-5240** XLR Analog In/Out Module, 4ch.
- **52-5243** XLR Analog In/Out Module, 4ch.
- **52-5250** XLR 4 Mic/Line Module, isolated
- **52-5260** XLR 4 Line Out Module, isolated

Slots C1 to C5:

- **52-5310** SubD GPIO Module, 8 out, 4 in
- **52-5311** SubD GPIO Module, 8 out, 4 in

The channels of the selected I/O modules can be configured to mono or stereo and you can set a label for each single input and output here. Additionally, you can set a local level adjustment for each single input and output.

Moreover, you can adjust the headroom for the inputs of the 52-5230 and 52-5250 modules. Please note, that these settings influence the internal reference level (0 dBint) you select in the Level Adjust column. If you change the headroom of an 52-5230 or 52-5250 module and use the function Set all analog level afterwards, may be some

misinterpretation will occur. Therefore, check the values in the `Level Adjust` column of all 52-5230 and 52-5250 modules and - if necessary - choose again the wanted values for the single inputs to correct the settings.


7.1.6 Synchronisation

Selecting the `Audio` branch, displays the synchronisation window. Here you can do refinements on the current device synchronisation.

It is possible, to configure two independent synchronisation sources. `Sync Source 1` is always meant to be the master sync source and is used by the system as long as it is available. If it fails and a secondary sync source is configured and available, the system automatically switches over to `Sync Source 2`. If this source is not available, too, or not configured, the system switches to `Internal Synchronisation`.


Currently, the Toolbox5 supports synchronisation frequencies of 48 kHz and 44.1 kHz. In a future version, also 96 kHz and 88.2 kHz will be supported. The hardware is already able to handle both higher frequencies.

Switch on the `VariSpeed` option, if you want to synchronise the router to an external synchronisation frequency with a larger jitter. This option activates a VariPLL, which could handle such sources.

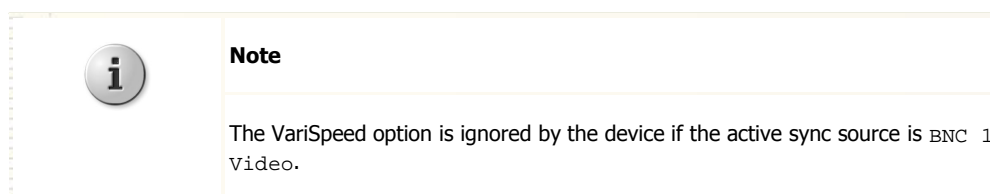

You can choose the synchronisation source out of a list of 9 possible sources:

- Internal
- BNC 1 Word Clock
- BNC 2 Word Clock
- MADI 3.1
- MADI 13.1
- RJ45 AES3/EBU
- BNC 1 AES3/EBU
- BNC 2 AES3/EBU
- BNC 1 Video (supported standards: PAL, NTSC) - If the video sync is used, the VariSpeed option is not useable.

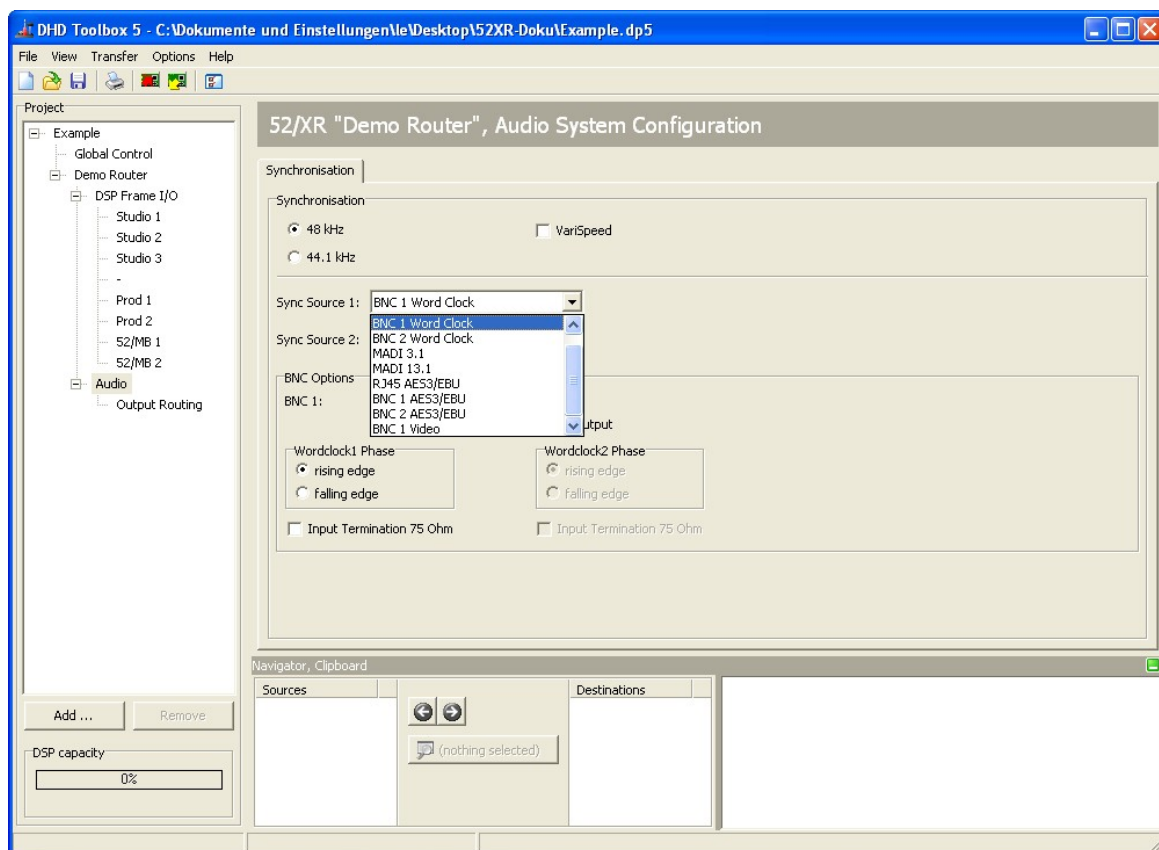


The synchronisation tab can be seen by selecting the Audio branch.


If a BNC is chosen as sync source, you can define whether the system should react on the rising or the falling edge and you can activate the input termination if the sync signal ends at this input (no t-piece at the input). As long as BNC 2 is not selected as a sync source, it is possible to configure it as output. In the output mode you can choose between rising and falling edge to produce a phase shift.

7.1.7 Transferring a Configuration to a Device

If you want to transfer a configuration to a device, please follow these steps:

- Select the desired device in the projects device tree.
- Click on the  symbol in the toolbar or choose Load to Device in the Transfer menu. The DHD Connection Dialog appears.
- Select the desired hardware from the list and press OK.

The transfer process starts and the configuration is copied to the chosen hardware.

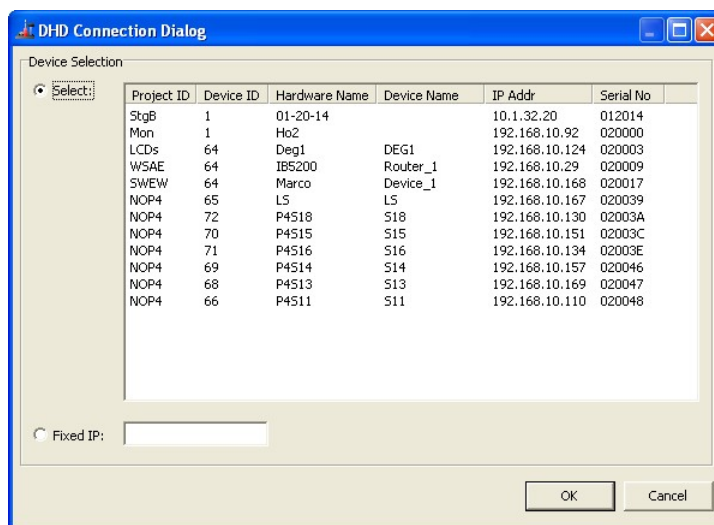

The Connection Dialog of the Toolbox5.

If an 52/XR MADI Router is available but unreachable via network, you probably need to refine the network settings. Please refer to the section [Connecting the Device to a PC](#) to learn more about the network configuration of an 52/XR MADI Router.

7.2 Operation with DHDOS and DHDOM

During its operation, the 52/XR MADI Router is controlled by the DHD Operation Server (DHDOS) and the user interface software DHD Operation Manager (DHDOM).

The DHDOS acts in the background and administrates the actual control of the crosspoints.

The DHDOM is a comfortable user interface to set the crosspoint states of an 52/XR MADI Router directly or scheduled. The software also offers a lot of additional options like user accounts and the adjustment of the software user interface concerning the rights and needs of each single user. Moreover, other applications intended for the use with 52/MX Mixing Consoles are included in this software (DSP Control Software, Remote Control, Snapshot Manager).



Note

Please find a comprehensive description of the DHDOS and the DHDOM and there functions in the DHDOS & DHDOM manuals. The DHDOS/DHDOM - Routing, Scheduling and Monitoring Software Manual includes the information concerning the routing applications.



Note


Please note, at least one 52-8550 Routing/Scheduling Software Or 52-8551 Routing Software license is needed to be able to control the 52-6720 TOM module with the DHD Operation Manager. Without one of these licenses it is not possible to route signals to the outputs of the module and to control the options of the module (level etc.)!

More information on the TOM module and its use can be found in the DHDOS/DHDOM - Routing, Scheduling and Monitoring Software Manual.

8 Further Information

8.1 Maintenance

For maintenance purposes the DHD Maintenance software is provided. To start the application the Toolbox5 software needs to be opened. In the Toolbox5 select the `Maintenance Window` command of the `View` menu or just press the `F7` key.

	Weblink
Please find a comprehensive description of the maintenance software and its functions in the section <code>Maintenance Window</code> of the Toolbox5 Manual .	

8.1.1 Firmware Update

When it leaves the factory, each 52/XR MADI Router is equipped with the most current operating software (firmware). As we are continuously developing the software, it might occur that after a while a newer version than that on your system will be available. Ask your DHD dealer about the current firmware version for your 52/XR MADI Router.

If a newer version is available, you first have to decide if it makes sense in your case to update the firmware.



Tip

Only upgrade the operating software of the 52/XR MADI Router if:

- you need new functions your version does not support yet,
- the new version eliminates a failure which impairs your system or
- DHD or your DHD dealer recommend that update.

The operating software of a well running system usually does not require an update.


If you want to upgrade your operating software, first determine the firmware version that is currently running on your system.

1. Select the system in the device list of the maintenance software DHD Maintenance (DHDMT), which you want to upgrade with a new firmware version.
2. In the `Version` line of the main window you will find information about the currently running firmware version.
3. A firmware update is provided as a file. For the firmware update of an 52/XR the same file is used like for the 52/MX Mixing Console. Firmware update files for the 52/XR MADI Router are named according to the following pattern:

`MX-XR_06-03-14.fw6`


The `MX-XR_06` code indicates an official firmware version for the 52/XR MADI Router. Figure two (here: 03) represents the major version of the firmware. The third figure refers to the minor version of the firmware (here: 14). The fourth figure always must be 01, meaning that it is an official version. This figure is not explicitly pointed out in the file name. Every 52/XR MADI Router firmware file ends with `.fw6`.

Select the `Update Firmware...` command from the `Update` menu and open the update file. A validity check will follow and you will be asked to either start the update process by confirming or to cancel the process.

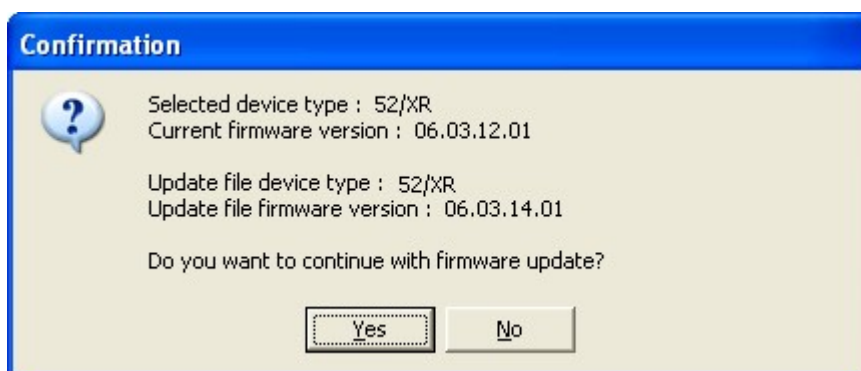


Confirming the firmware upload.

4. The updating process starts after pressing **Yes**. A progress bar is shown during the process, which will only take a few seconds.

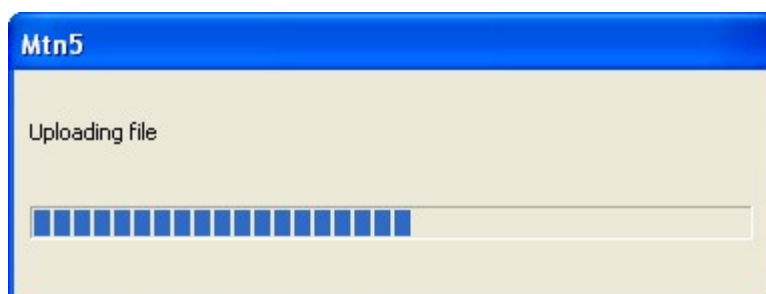

The progress bar during the firmware upload.

5. After successfully uploading the file, you will be asked to reset the system. The system loads the new operating software after a restart.

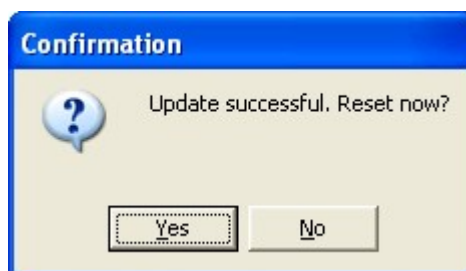

Confirming the reset.




Important

Normally, a firmware reset does not interrupt audio signals that are directly routed through the device. But a reset will interrupt all audio signals with DSP processing for a short period of time. Please only reset your 52/XR MADI Router when you are sure that a reset will not affect any on-air signals.

You can postpone the reset to a later time. Please note that the system will keep running the old firmware version until being restarted.

8.2 I/O Module Pin Assignment

8.2.1 52-5310A - MB/XD/XR GPIO Module, 8 out,4 in

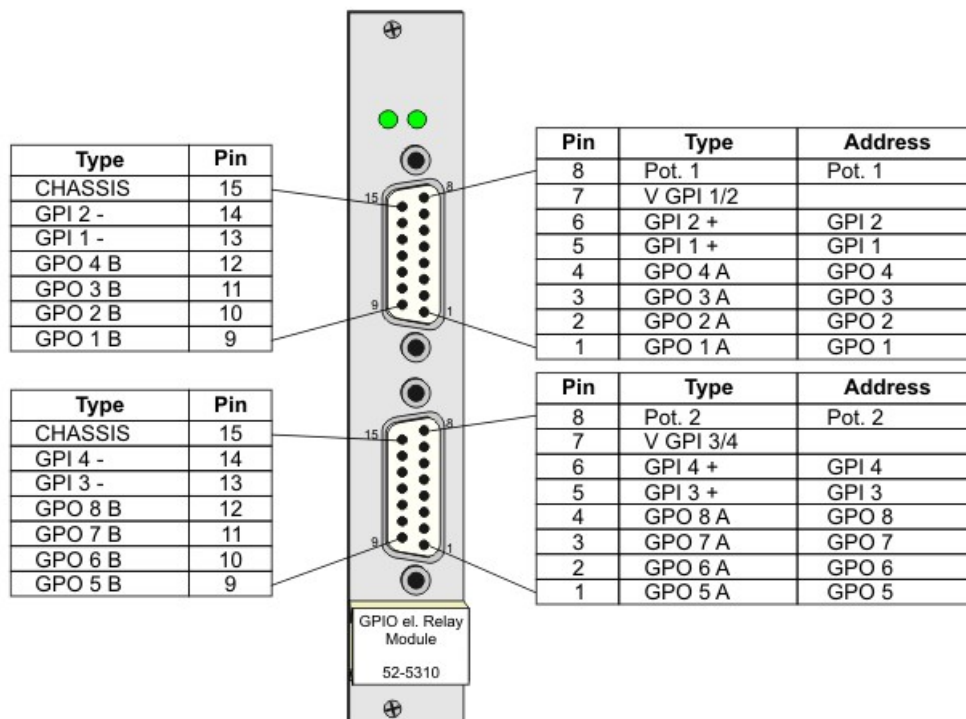


“CHASSIS” meint, nur verbunden mit Gehäuse des Gerätes und Steckergehäuse, jedoch nicht mit der internen Schaltungsmasse, da galvanisch getrennt.

“CHASSIS” means wired to DSP frame enclosure and connector housing, but not to internal circuit ground of the module because it is galvanically isolated.

Pin out for the 52-5310 Module.

8.2.2 52-5311A - MB/XD/XR GPIO Module, 8 out,4 in

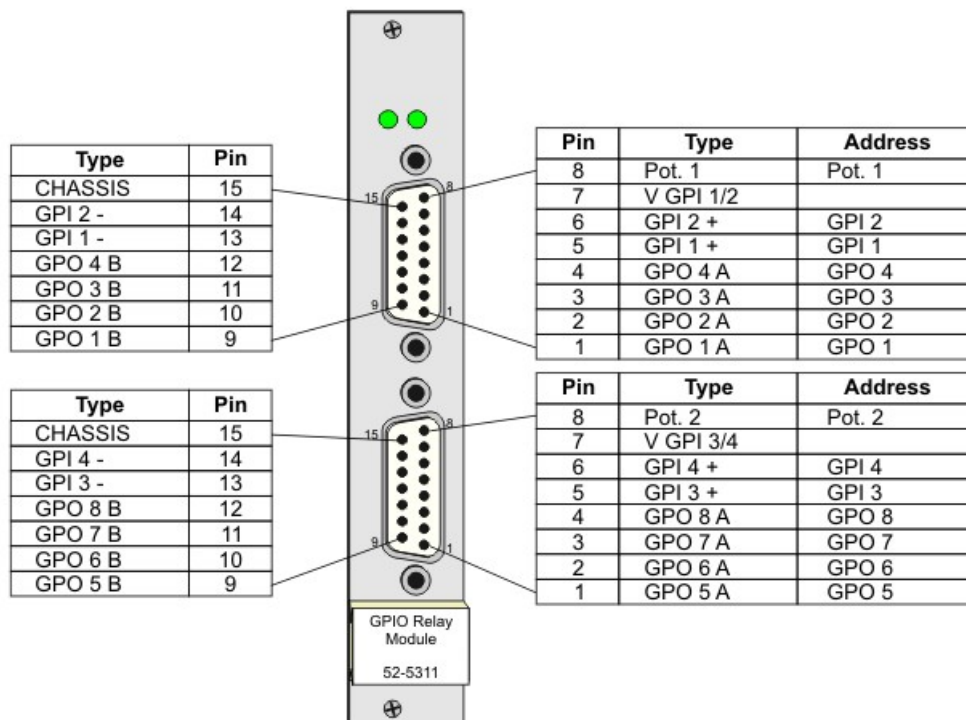


“CHASSIS” meint, nur verbunden mit Gehäuse des Gerätes und Steckergehäuse, jedoch nicht mit der internen Schaltungsmasse, da galvanisch getrennt.

“CHASSIS” means wired to DSP frame enclosure and connector housing, but not to internal circuit ground of the module because it is galvanically isolated.


Pin out for the 52-5311 Module.

8.2.3 52-5320A - XD/XR GPIO Module, 16 out, 4 in

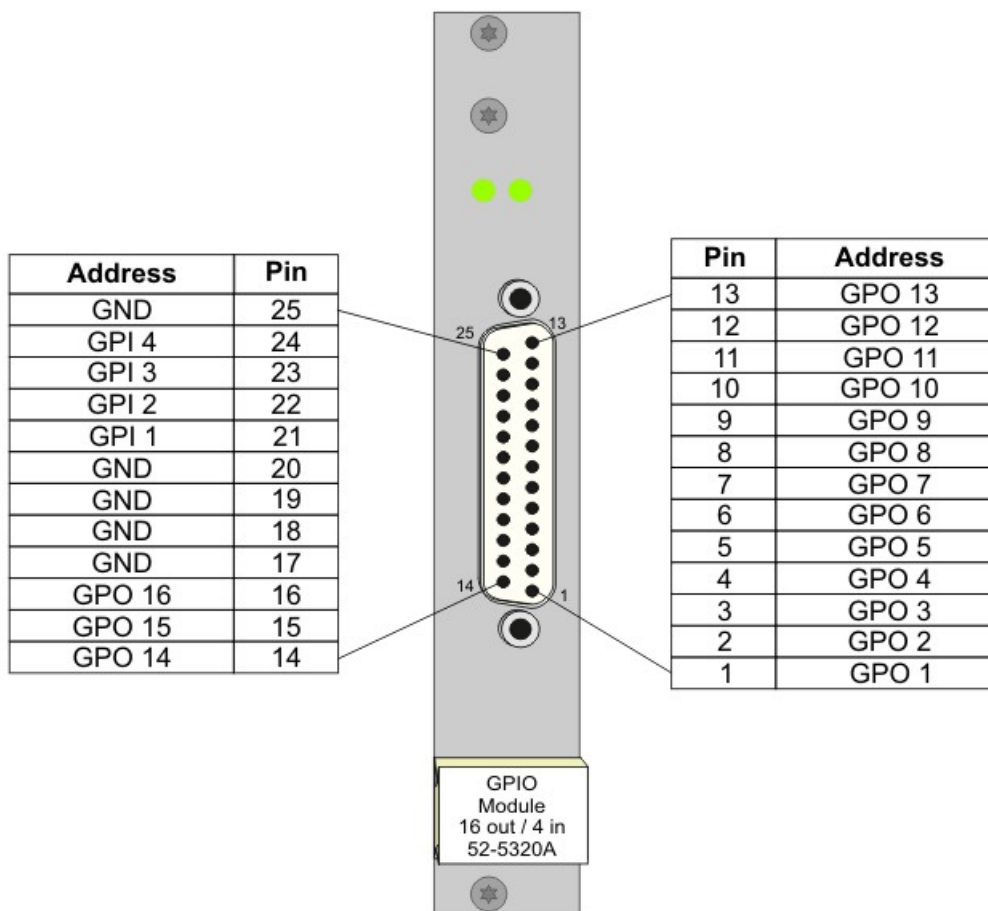


Pin out for the 52-5320 Module.

8.2.4 52-6710A - XR Router/DSP Sync. Module

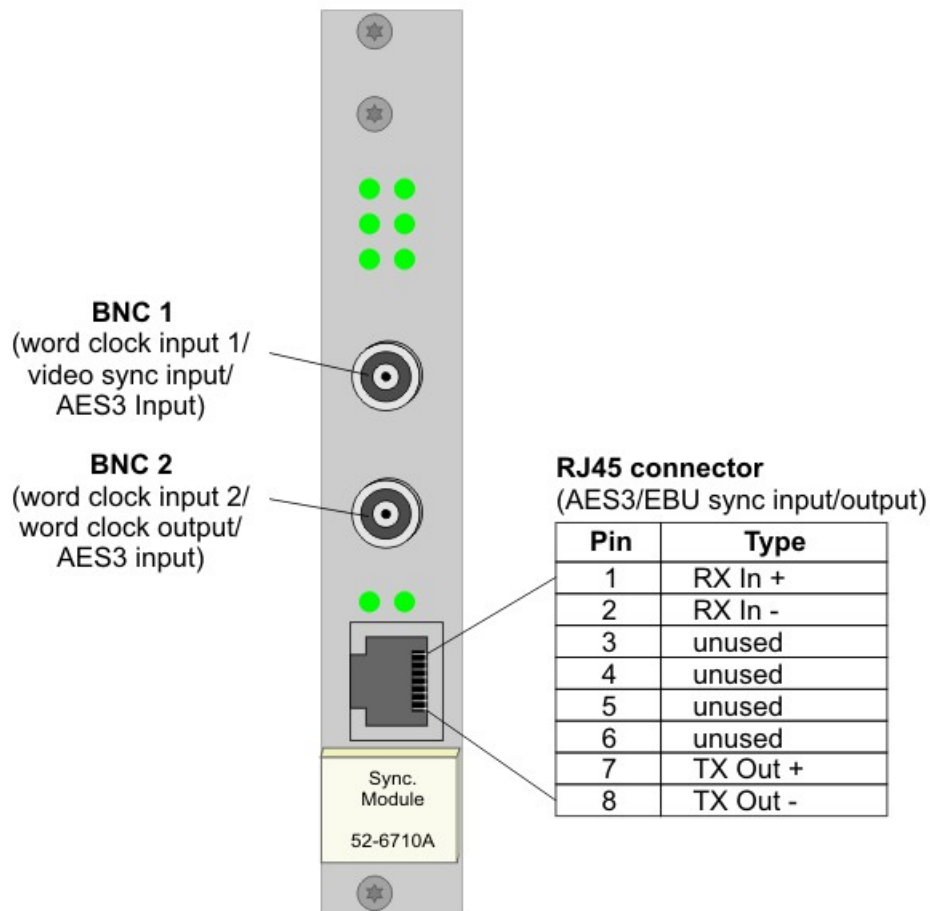

Pin out for the 52-6710 Module.

8.2.5 52-6720A - XR True Output Monitoring

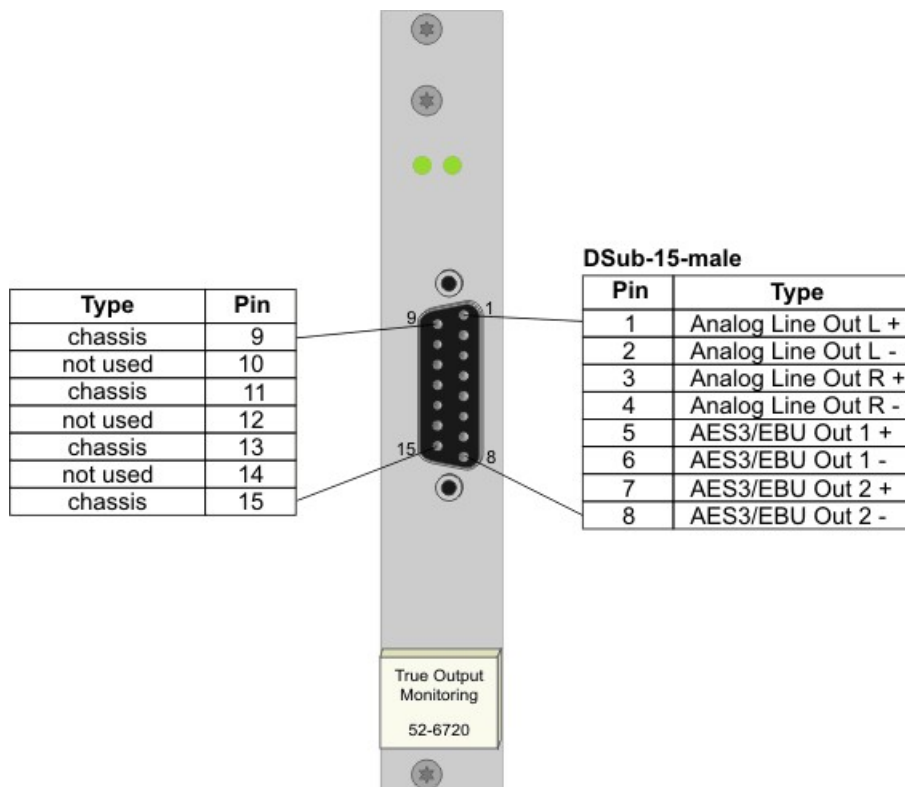


“chassis” meint, nur verbunden mit Gehäuse des Gerätes und Steckergehäuse, jedoch nicht mit der internen Schaltungsmasse, da galvanisch getrennt

“chassis” means wired to DSP frame enclosure and connector housing, but not to internal circuit ground of the module because it is galvanically isolated

Pin out for the 52-6720 Module.

8.3 Meaning of the LEDs

8.3.1 52-6120A - XR Dual MADI Module, multimode

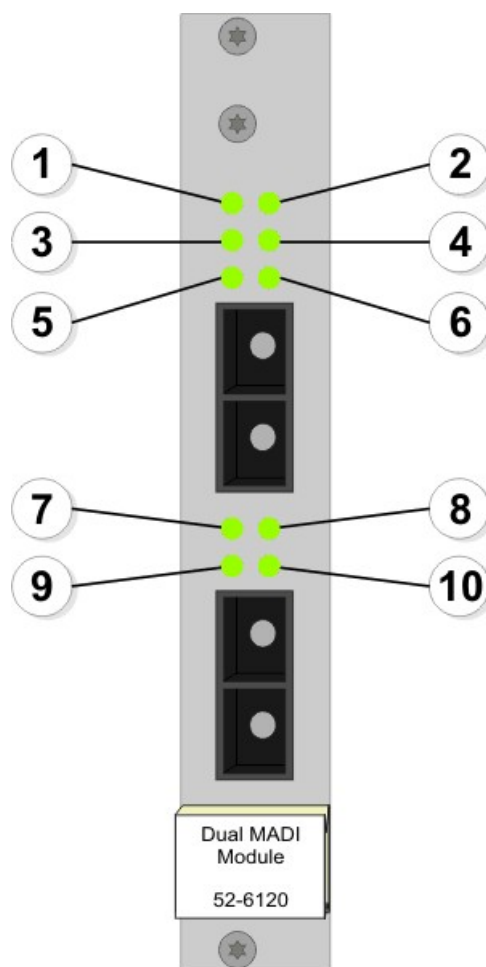


Meaning of the LEDs of the 52-6120 Module.

1. This LED is permanently on if the module is powered.
2. Indicates, that the module is running. This LED blinks. Seen from left to right over the entire system, these LEDs should blink as a moving light.
3. LED 3 indicates, that routing kernel no. 1 is sending data to the outputs of the upper MADI port. This LED is blinking if the first kernel starts malfunctioning. That means, the first kernel should send data to the outputs of the upper MADI port, but it does not. If a second, redundant routing kernel is available, LED 4 indicates, that the second routing kernel is operating now.
4. Normally, the first kernel should send data to the outputs of the upper MADI port. If the first kernel is malfunctioning, LED 4 indicates, that routing kernel no. 2 is sending data to the outputs of the upper MADI port.
5. The LED indicates, that routing kernel no. 1 is locked to the inputs of the upper MADI port.
6. If a redundant kernel is installed, this LED indicates, that routing kernel no. 2 is locked to the inputs of the upper MADI port.
7. LED 7 indicates, that routing kernel no. 1 is sending data to the outputs of the lower MADI port. This LED is blinking if the first kernel starts malfunctioning. That means, the first kernel should send data to the outputs of the lower MADI port, but it does not. If a second, redundant routing kernel is available, LED 8 indicates, that the second routing kernel

is operating now.

8. Normally, the first kernel should send data to the outputs of the lower MADI port. If the first kernel is malfunctioning, LED 8 indicates, that routing kernel no. 2 is sending data to the outputs of the lower MADI port.
9. The LED indicates, that routing kernel no. 1 is locked to the inputs of the lower MADI port.
10. If a redundant kernel is installed, this LED indicates, that routing kernel no. 2 is locked to the inputs of the lower MADI port.

8.3.2 52-6125A - XR Dual MADI Module, single mode

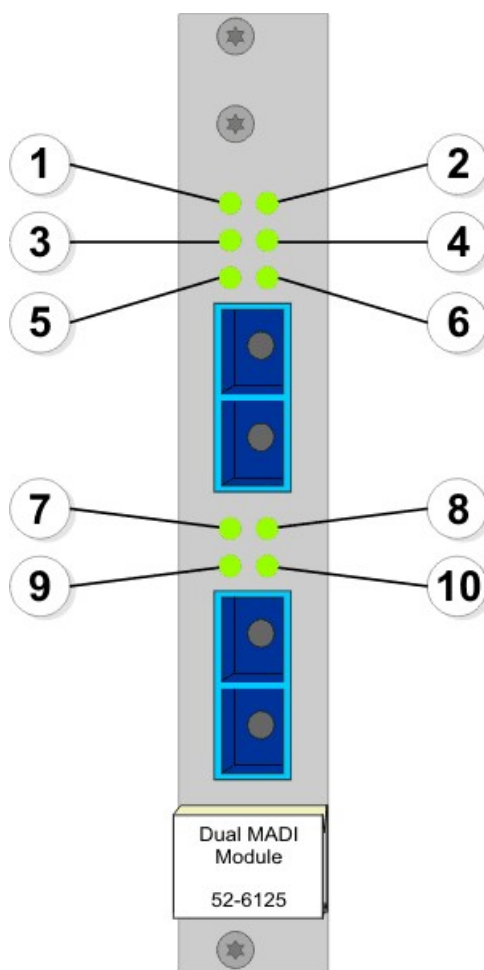


Meaning of the LEDs of the 52-6125 Module.

1. This LED is permanently on if the module is powered.
2. Indicates, that the module is running. This LED blinks. Seen from left to right over the entire system, these LEDs should blink as a moving light.
3. LED 3 indicates, that routing kernel no. 1 is sending data to the outputs of the upper MADI port. This LED is blinking if the first kernel starts malfunctioning. That means, the first kernel should send data to the outputs of the upper MADI port, but it does not. If a second, redundant routing kernel is available, LED 4 indicates, that the second routing kernel is operating now.
4. Normally, the first kernel should send data to the outputs of the upper MADI port. If the first kernel is malfunctioning, LED 4 indicates, that routing kernel no. 2 is sending data to the outputs of the upper MADI port.

5. The LED indicates, that routing kernel no. 1 is locked to the inputs of the upper MADI port.
6. If a redundant kernel is installed, this LED indicates, that routing kernel no. 2 is locked to the inputs of the upper MADI port.
7. LED 7 indicates, that routing kernel no. 1 is sending data to the outputs of the lower MADI port. This LED is blinking if the first kernel starts malfunctioning. That means, the first kernel should send data to the outputs of the lower MADI port, but it does not. If a second, redundant routing kernel is available, LED 8 indicates, that the second routing kernel is operating now.
8. Normally, the first kernel should send data to the outputs of the lower MADI port. If the first kernel is malfunctioning, LED 8 indicates, that routing kernel no. 2 is sending data to the outputs of the lower MADI port.
9. The LED indicates, that routing kernel no. 1 is locked to the inputs of the lower MADI port.
10. If a redundant kernel is installed, this LED indicates, that routing kernel no. 2 is locked to the inputs of the lower MADI port.

8.3.3 52-6129A - XR Dual MADI Module, multi/single

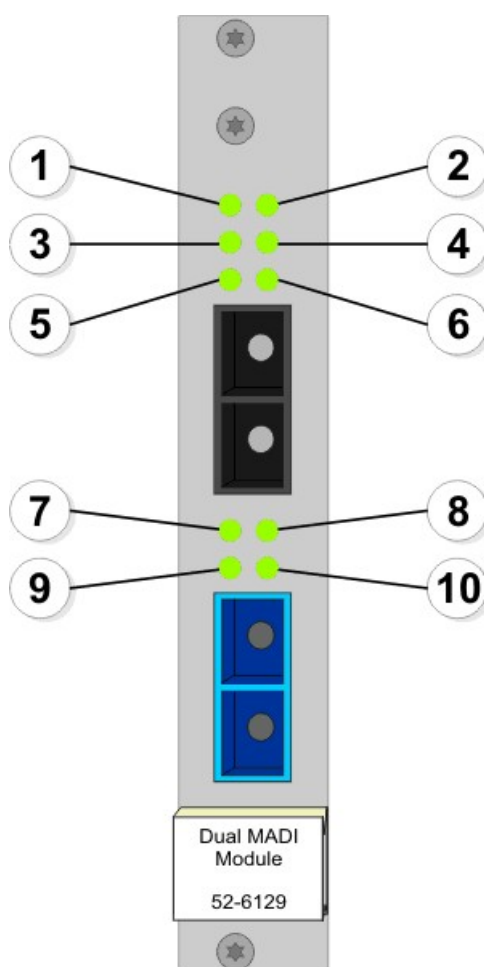


Meaning of the LEDs of the 52-6129 Module.

1. This LED is permanently on if the module is powered.
2. Indicates, that the module is running. This LED blinks. Seen from left to right over the entire system, these LEDs should blink as a moving light.

3. LED 3 indicates, that routing kernel no. 1 is sending data to the outputs of the upper MADI port. This LED is blinking if the first kernel starts malfunctioning. That means, the first kernel should send data to the outputs of the upper MADI port, but it does not. If a second, redundant routing kernel is available, LED 4 indicates, that the second routing kernel is operating now.
4. Normally, the first kernel should send data to the outputs of the upper MADI port. If the first kernel is malfunctioning, LED 4 indicates, that routing kernel no. 2 is sending data to the outputs of the upper MADI port.
5. The LED indicates, that routing kernel no. 1 is locked to the inputs of the upper MADI port.
6. If a redundant kernel is installed, this LED indicates, that routing kernel no. 2 is locked to the inputs of the upper MADI port.
7. LED 7 indicates, that routing kernel no. 1 is sending data to the outputs of the lower MADI port. This LED is blinking if the first kernel starts malfunctioning. That means, the first kernel should send data to the outputs of the lower MADI port, but it does not. If a second, redundant routing kernel is available, LED 8 indicates, that the second routing kernel is operating now.
8. Normally, the first kernel should send data to the outputs of the lower MADI port. If the first kernel is malfunctioning, LED 8 indicates, that routing kernel no. 2 is sending data to the outputs of the lower MADI port.
9. The LED indicates, that routing kernel no. 1 is locked to the inputs of the lower MADI port.
10. If a redundant kernel is installed, this LED indicates, that routing kernel no. 2 is locked to the inputs of the lower MADI port.


8.3.4 52-5310A - MB/XD/XR GPIO Module, 8 out, 4 in

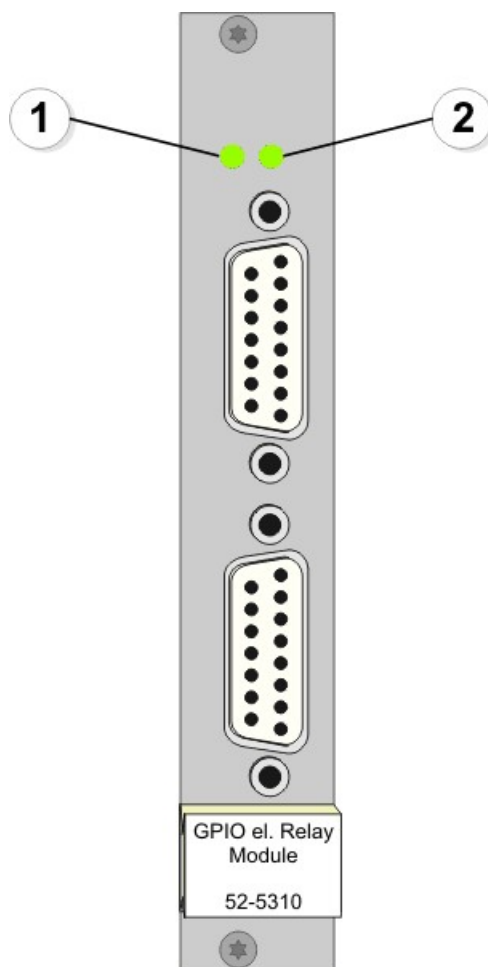

Meaning of the LEDs of the 52-5310 Module.

1. This LED is permanently on if the module is powered.
2. Indicates, that the module is running. This LED blinks. Seen from left to right over the entire system, these LEDs should blink as a moving light.


8.3.5 52-5311A - MB/XD/XR GPIO Module, 8 out, 4 in

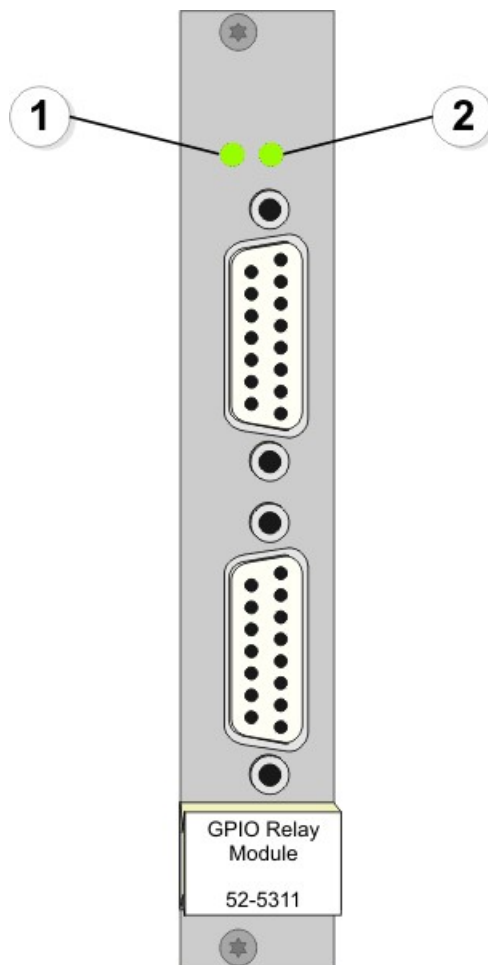

Meaning of the LEDs of the 52-5311 Module.

1. This LED is permanently on if the module is powered.
2. Indicates, that the module is running. This LED blinks. Seen from left to right over the entire system, these LEDs should blink as a moving light.


8.3.6 52-5320A - XD/XR GPIO Module, 16 out, 4 in

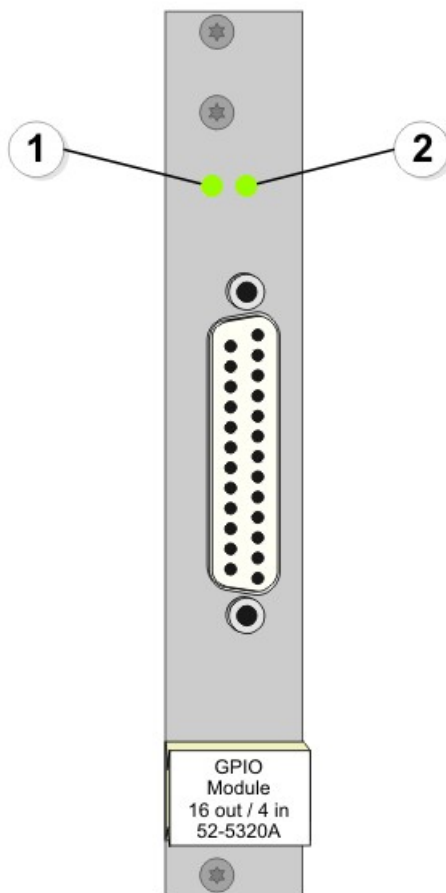

Meaning of the LEDs of the 52-5311 Module.

1. This LED is permanently on if the module is powered.
2. Indicates, that the module is running. This LED blinks. Seen from left to right over the entire system, these LEDs should blink as a moving light.


8.3.7 52-6440A - XR Router/DSP Kernel Module 4096

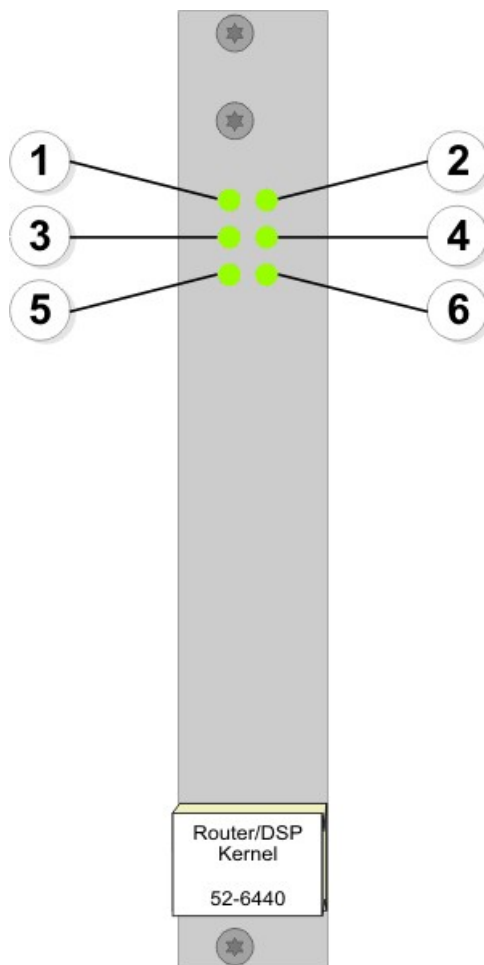

Meaning of the LEDs of the 52-6440 Module.

1. This LED is permanently on if the module is powered.
2. This LED shows the hardware status and is permanently on if the boot process of the programmable logic was successfully done.
3. This LED indicates the DSP usage. The more the LED glows, the more DSP power is used.
4. Indicates, that the module is running. This LED blinks. Seen from left to right over the entire system, these LEDs should blink as a moving light.
5. This LED is permanently on, but momentary unused and reserved for future functions.
6. This LED is permanently on, but momentary unused and reserved for future functions.


8.3.8 52-6442A - XR Router/DSP Kernel Module 2048

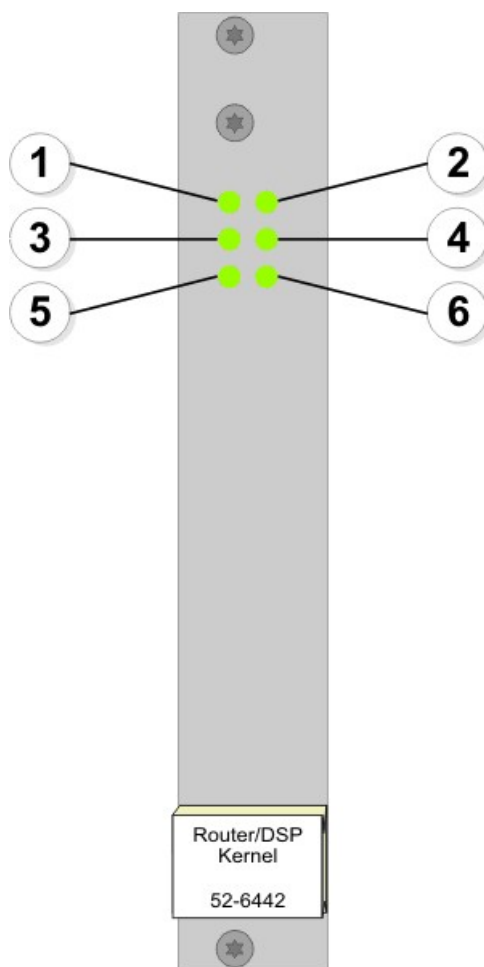

Meaning of the LEDs of the 52-6442 Module.

1. This LED is permanently on if the module is powered.
2. This LED shows the hardware status and is permanently on if the boot process of the programmable logic was successfully done.
3. This LED indicates the DSP usage. The more the LED glows, the more DSP power is used.
4. Indicates, that the module is running. This LED blinks. Seen from left to right over the entire system, these LEDs should blink as a moving light.
5. This LED is permanently on, but momentary unused and reserved for future functions.
6. This LED is permanently on, but momentary unused and reserved for future functions.


8.3.9 52-6850A - XR Comm. Controller, red.

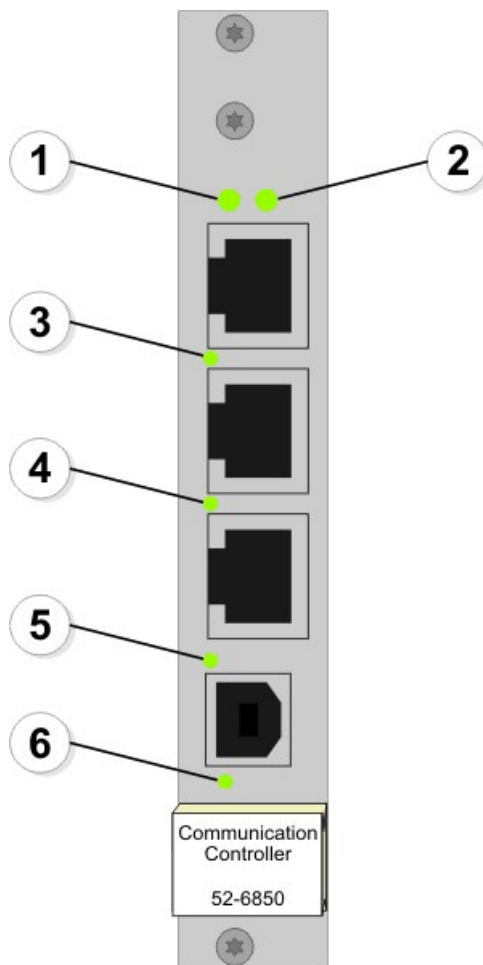

Meaning of the LEDs of the 52-6850 Module.

1. Indicates, that the module is running. This LED blinks. Seen from left to right over the entire system, these LEDs should blink as a moving light.
2. The LED flashes if data is transmitted or received via the upper RJ45 port.
3. The LED is on if the communication controller is connected to the controller network via the middle RJ45 connector. It flashes if data is received.
4. The LED is on if the communication controller is connected to the DHD network via the lower RJ45 connector. It flashes if data is received.
5. This LED shows the hardware status of the programmable logic and is permanently on if the boot process of the programmable logic was successfully done.
6. This LED is permanently on and indicates the PLL-Lock of the controller after a reset or power on.


8.3.10 52-6851A - XR Communication Controller

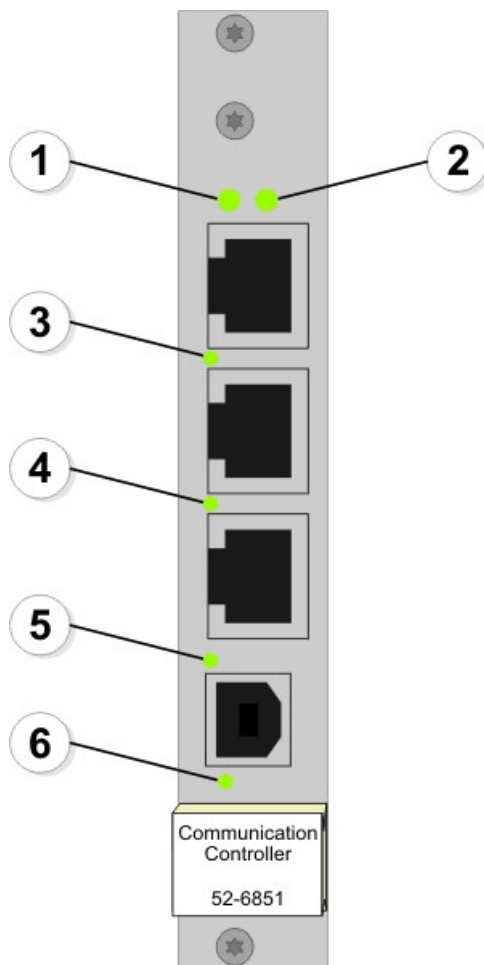

Meaning of the LEDs of the 52-6851 Module.

1. Indicates, that the module is running. This LED blinks. Seen from left to right over the entire system, these LEDs should blink as a moving light.
2. This LED is momentary unused and is reserved for future functions.
3. The LED is on if the communication controller is connected to the controller network via the middle RJ45 connector. It flashes if data is received.
4. The LED is on if the communication controller is connected to the DHD network via the lower RJ45 connector. It flashes if data is received.
5. This LED shows the hardware status of the programmable logic and is permanently on if the boot process of the programmable logic was successfully done.
6. This LED is permanently on and indicates the PLL-Lock of the controller after a reset or power on.

8.3.11 52-6710A - XR Router/DSP Sync. Module

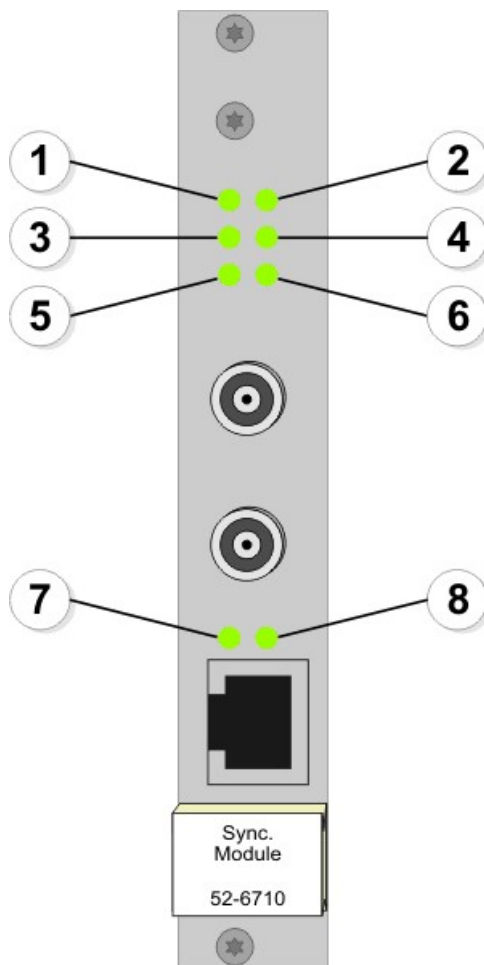


Meaning of the LEDs of the 52-6710 Module.

1. This LED is permanently on if the module is powered.
2. Indicates, that the module is running. This LED blinks. Seen from left to right over the entire system, these LEDs should blink as a moving light.
3. Indicates, that the primary sync is active. Dependent on the configuration, the primary sync source can be the upper BNC (Word Clock, AES3/EBU or Video), the lower BNC (Word Clock or AES3/EBU), the RJ45 connector of the sync module (AES3/EBU), a MADI signal (MADI port 3.1 or 13.1) or the internal sync. This LED can not be on if LED 4 glows and it blinks during the video signal locking process.
4. Indicates, that the secondary sync is active. Dependent on the configuration, the secondary sync source can be the upper BNC (Word Clock, AES3/EBU or Video), the lower BNC (Word Clock or AES3/EBU), the RJ45 connector of the sync module (AES3/EBU), a MADI signal (MADI port 3.1 or 13.1) or the internal sync. This LED can not be on if LED 3 glows and it blinks during the video signal locking process.
5. The LED is permanently on if the primary sync is functional. Blinking indicates, that PLL 1 is out of range.
6. The LED is permanently on if the secondary sync is functional. Blinking indicates, that PLL 2 is out of range.
7. Indicates, that the primary AES3/EBU sync signal (connected to the upper BNC, the lower BNC or the RJ45 jack of the sync module) is locked.
8. Indicates, that the secondary AES3/EBU sync signal (connected to the upper BNC, the lower BNC or the RJ45 jack of the

sync module) is locked.


8.3.12 52-6720A - XR True Output Monitoring

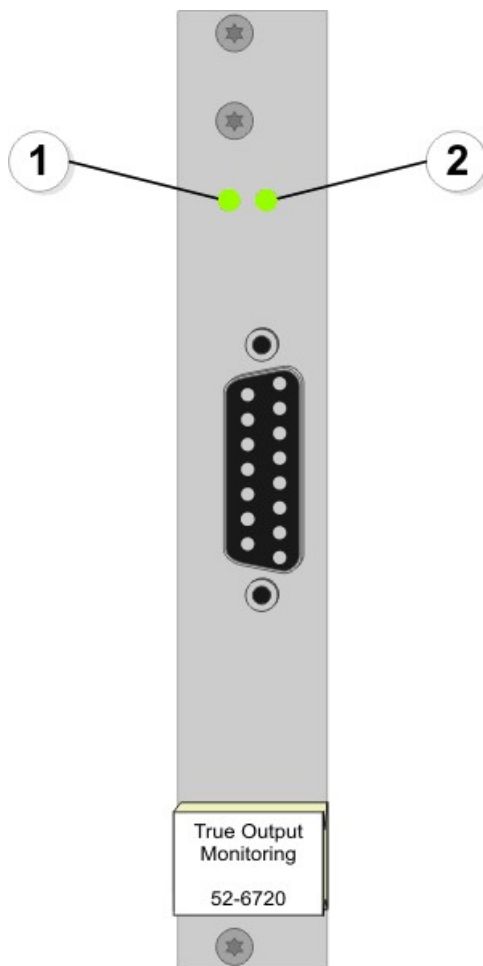

Meaning of the LEDs of the 52-6720 Module.

1. This LED is permanently on if the module is powered.
2. Indicates, that the module is running. This LED blinks. Seen from left to right over the entire system, these LEDs should blink as a moving light.

8.3.13 52-5860A - XD/XR RS232/RS422 Extender

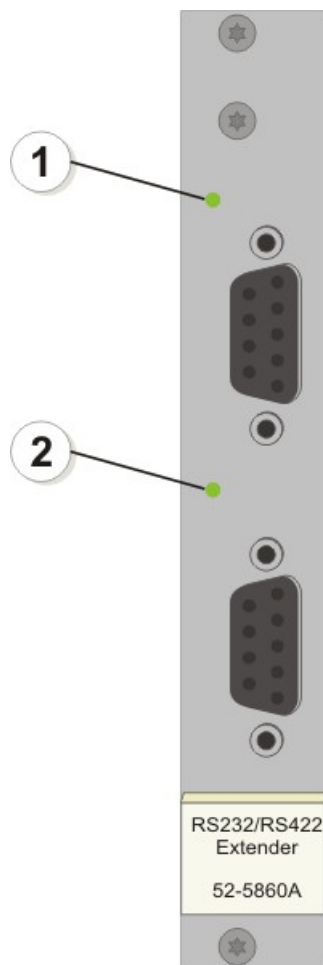

Meaning of the LEDs of the 52-5860 Module.

1. This LED is permanently on if the module is powered.
2. Indicates, that an RS422 signal is connected to the lower port. This signal indication does not show, whether it is a valid RS422 signal or not.

8.4 Audio Latency

In the table below you can find the latencies of single processes inside the 52/MB MADI Breakout System (same values like the 52/CR) and also for the 52/XR MADI Router. Besides, there are listed some total latencies for possible combinations of processes.


Example signal flows:

	Audio Samples	An-Router -An	Dig-Router -An	An-Router -Dig	Dig-Router -Dig	DigSRC-Router -Dig	DigSRC-Router -DigSRC	DigSRC Deemb-Router -DigEmb
Routing Kernel, general latency	4	4	4	4	4	4	4	4
52/MB and 52/CR input, general latency	10	10	10	10	10	10	10	10
52/MB and 52/CR output, general latency	10	10	10	10	10	10	10	10
AD converter CS5361, component dependent latency	12	12		12				
DA converter PCM1793, component dependent latency	29	29	29					
SRC AD1895 input, component dependent latency	48					48	48	48
SRC AD1895 output, component dependent latency	48						48	
SDI embedder, component dependent latency	<48							<48
SDI de-embedder, component dependent latency	<48							<48
total latency in samples (typical)		65	53	36	24	72	120	<168
total latency @ 48kHz in ms (typical)		1.35	1.10	0.75	0.50	1.50	2.50	<3.50

An- analog input
 Dig- digital input
 DigSRC- digital input with sample rate converter
 DigSRCDeemb- digital input with sample rate converter and SDI de-embedder
 -An analog output
 -Dig digital output
 -DigSRC digital output with sample rate converter
 -DigEmb digital output with SDI embedder

8.5 Example of Use

In the following drawing, you can find an example how to integrate an 52/XR MADI Router into an audio network.

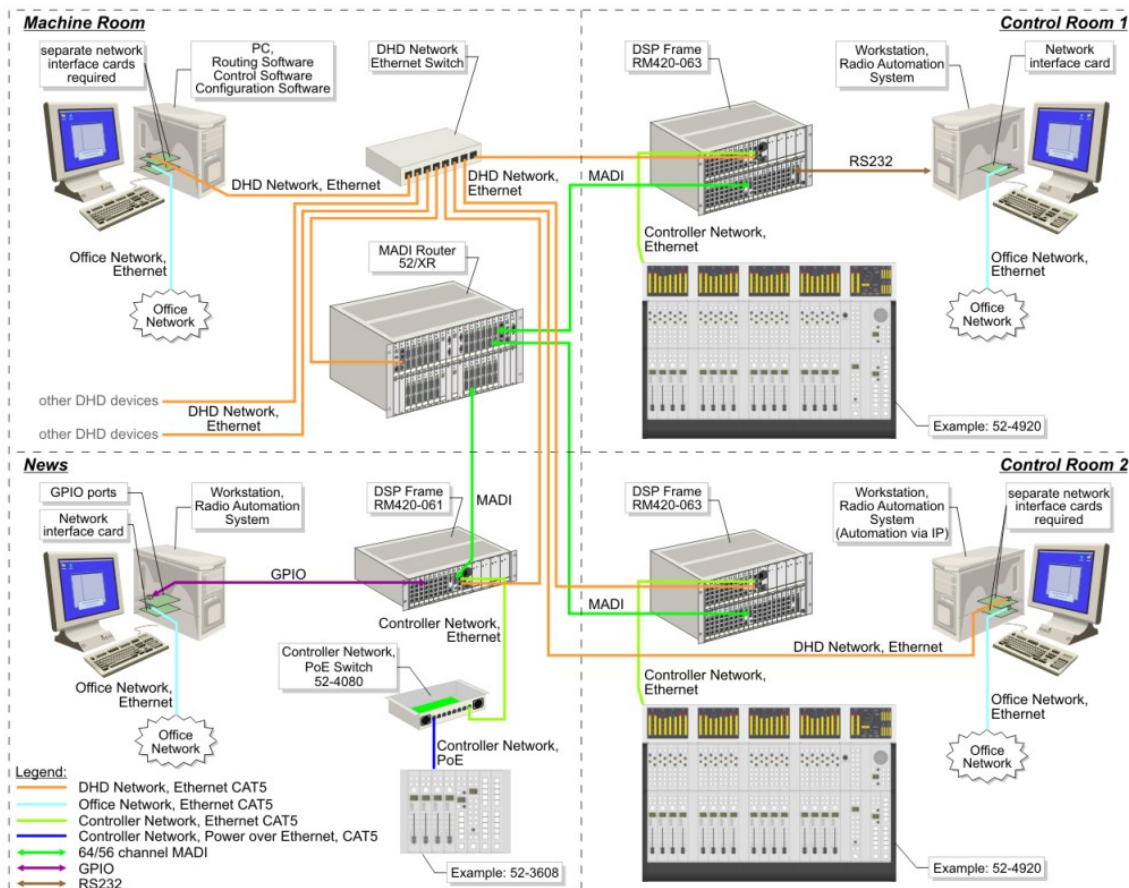

Series 52 audio network with an 52/XR MADI Router and 52/MX consoles.

In this example an 52/XR MADI Router is located in the machine room. The router is connected to the mixing consoles in the studios (Control Room 1, Control Room 2 and News) via MADI. Within the DHD ethernet network, the router is able to exchange control data with other devices.

Please find more information about the wiring of an 52/XR MADI Router in the 52/XR Installation Guide.

Index

3

32bit float 24

5

52/MB 28

52/MB at a MADI Port 28

52-5048A - Power Supply Module 48V / 200W 9

52-5088A - PoE Switch Module 9

52-5310A - GPIO Module, 8 out,4 in 9

52-5310A - MB/XD/XR GPIO Module, 8 out,4 in 34, 43

52-5311A - GPIO Module, 8 out,4 in 9

52-5311A - MB/XD/XR GPIO Module, 8 out,4 in 35, 44

52-5320A - GPIO Module, 16 out,4 TTL in 9

52-5320A - XD/XR GPIO Module, 16 out, 4 in 36, 45

52-5860A - RS232/RS422 Extender 9

52-5860A - XD/XR RS232/RS422 Extender 52

52-5862A - RS232/RS232 Extender 9

52-6063A - XR Router/DSP Frame 3HU, empty 9

52-6066A - XR Router/DSP Frame 6HU, empty 9

52-6120A - Dual MADI Module, multimode 9

52-6120A - XR Dual MADI Module, multimode 39

52-6125A - Dual MADI Module, single mode 9

52-6125A - XR Dual MADI Module, single mode 40

52-6129A - Dual MADI Module, multi/single 9

52-6129A - XR Dual MADI Module,multi/single 41

52-6440A - Router/DSP Kernel Module 4096 9

52-6440A - XR Router/DSP Kernel Module 4096 46

52-6442A - Router/DSP Kernel Module 2048 9

52-6442A - XR Router/DSP Kernel Module 2048 47

52-6710A - Router/DSP Sync. Module 9

52-6710A - XR Router/DSP Sync. Module 37, 50

52-6720A - True Output Monitoring 9

52-6720A - XR True Output Monitoring 38, 51

52-6850A - Comm. Controller, red. 9

52-6850A - XR Comm. Controller, red. 48

52-6851A - Communication Controller 9

52-6851A - XR Communication Controller 49

52-8550 - Routing/Scheduling Software 9

52-8551 - Routing Software 9

52-8552 - Routing Software, single matrix 9

52-8553 - Additional license for 52-8550 9

52-8554 - Additional license for 52-8551 9

52-8555 - Monitoring Software 9

52-8571 - Pro-Bel Protocol SW-P-02 9

52-8572 - ESAM-II control protocol 9

A

About this Book 2

Add Devices 23

AES10 MADI 24

Assemble a Device 9

Audio 29

Audio Latency 53

audio network 54

Automatic IP Assignment by a DHCP Server 15

Automatically via DHCP 15

C

communication 14

Communication Controller 24

Configure and Label Single Inputs and Outputs 26

Configuring MADI Redundancy 27

Configuring with the Toolbox5 Software 21

Connecting the Device to a PC 14

Controller Modules 9

Controller Redundancy 10, 11

D

DHCP server 15

DHD Communication Server 21

DHD Connection Dialog 30
 DHD Maintenance software 32
 DHDOM 31
 DHDOS 31
 DSP Frame I/O 24
 DSP Frame I/O Configuration 24

E

Ethernet Interface 14
 Example of Use 54

F

Firmware Update 32
 Fixed 15
 Fixed IP Setting 15

H

Hardware Name 15
 Headroom 24

I

I/O Frames 9
 I/O Modules 9
 IEEE 802.3u 14
 Inputs and Outputs 26
 Installing the USB Driver 18
 Internal Synchronisation 29
 IP address 14
 IP Basic Settings 14
 IP Configuration 15
 IP settings 15

L

Latency 53

Load to Device 30

M

MAC address 14
 MADI port 24
 MADI Redundancy 10
 Mail Server 15
 Maintenance 32
 Maintenance Window 15, 32

N

Network Config 15
 Network Time Protocol 15
 NTP 15
 Number of Channels 26

O

Operation with DHDOS and DHDOM 31

P

Power Supply & PoE Switch 9
 Power Supply Redundancy 10

R

Redundancy Options 10
 Retrieve Current 15
 Router / DSP Kernel Redundancy 10
 Router Kernel 24

S

Serial No 15
 serial number 14

Software 9
subnet mask 14
Sync Module 24
Sync Module Redundancy 10
Sync Source 1 29
Sync Source 2 29
Synchronisation 29
synchronisation source 29

T

Terms of Use 1
The Device Name 15
The Serial Number 15
Time Server 15
Toolbox5 21
transfer rate 14
Transferring a Configuration to a Device 30

U

Update Firmware 32
USB Interface 18

V

VariSpeed 29
View menu 15