
 
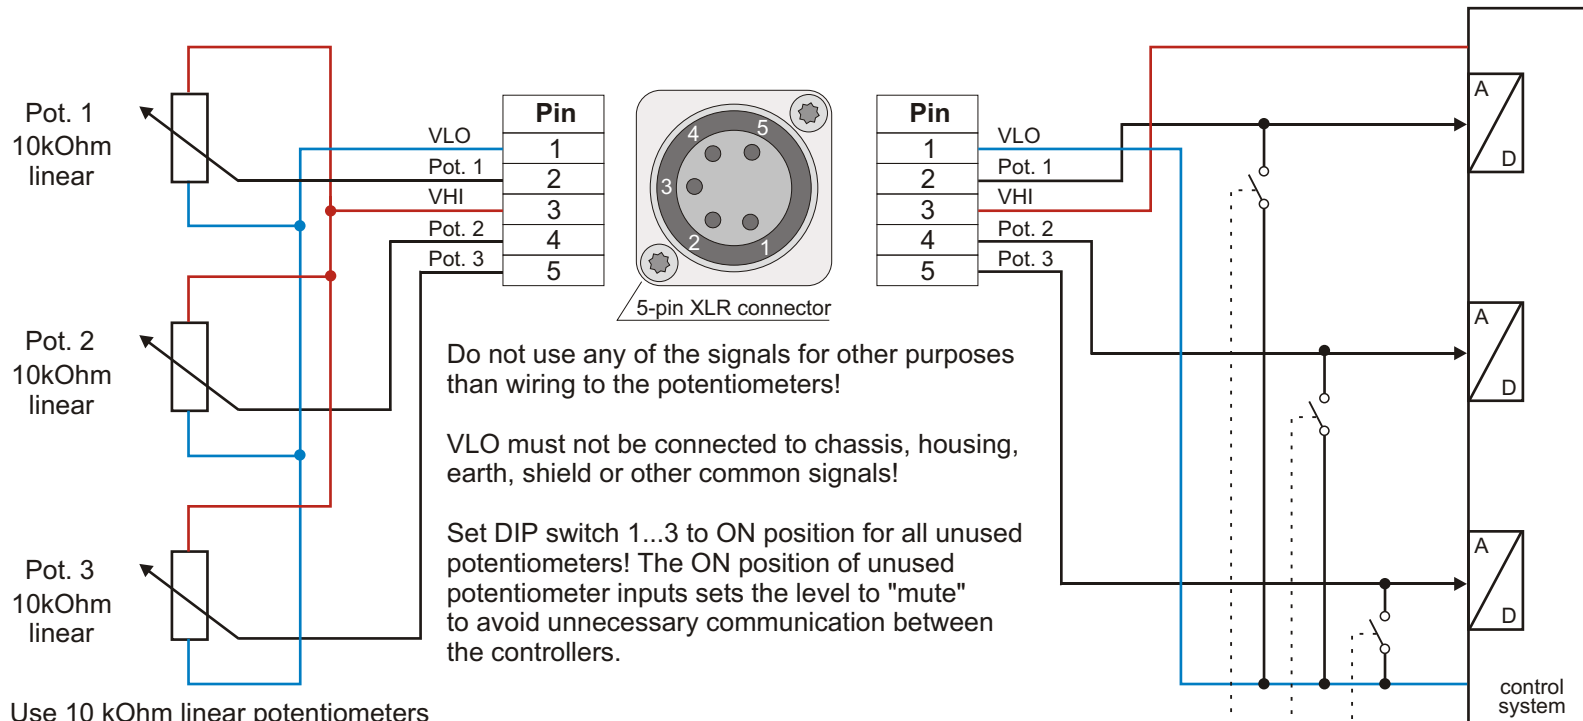


Wiring diagram for potentiometers on 52-6509A modules with 5-pin XLR connector



Use 10 kOhm linear potentiometers only, lower resistance potentiometers are not supported!

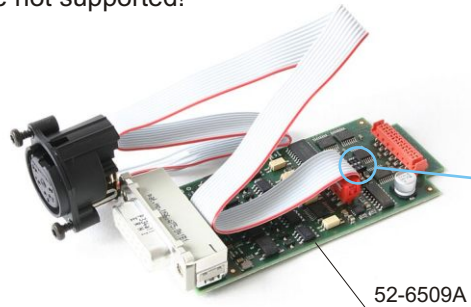

Set corresponding DIP switch number to OFF when an external potentiometer is connected.

Dip switch 4 is unused, independent of position ON or OFF.



Example: only Pot. 1 connected